


VLC Player - How to watch a video from 2N® Helios IPs RTSP server

2N® Helios IP settings

- First of all you have to set RTSP server and enable video, audio or booth – see pictures below. First one is for 2N® Helios IP FW version 2.5 and older, second one is for FW version 2.6 and newer (new web interface).
- If you do not fill in any IP address to "Allowed IP address X" fields then you will be able to watch the stream from any IP address (from any PC)
- If you fill some IP address into "Allowed IP address" field then you will be able to watch the stream only from that IP address
- Video resolution, frame rate, bitrate and size of video packets can be set as well - it is recommended to change it only if the video is not displayed correctly with default settings!

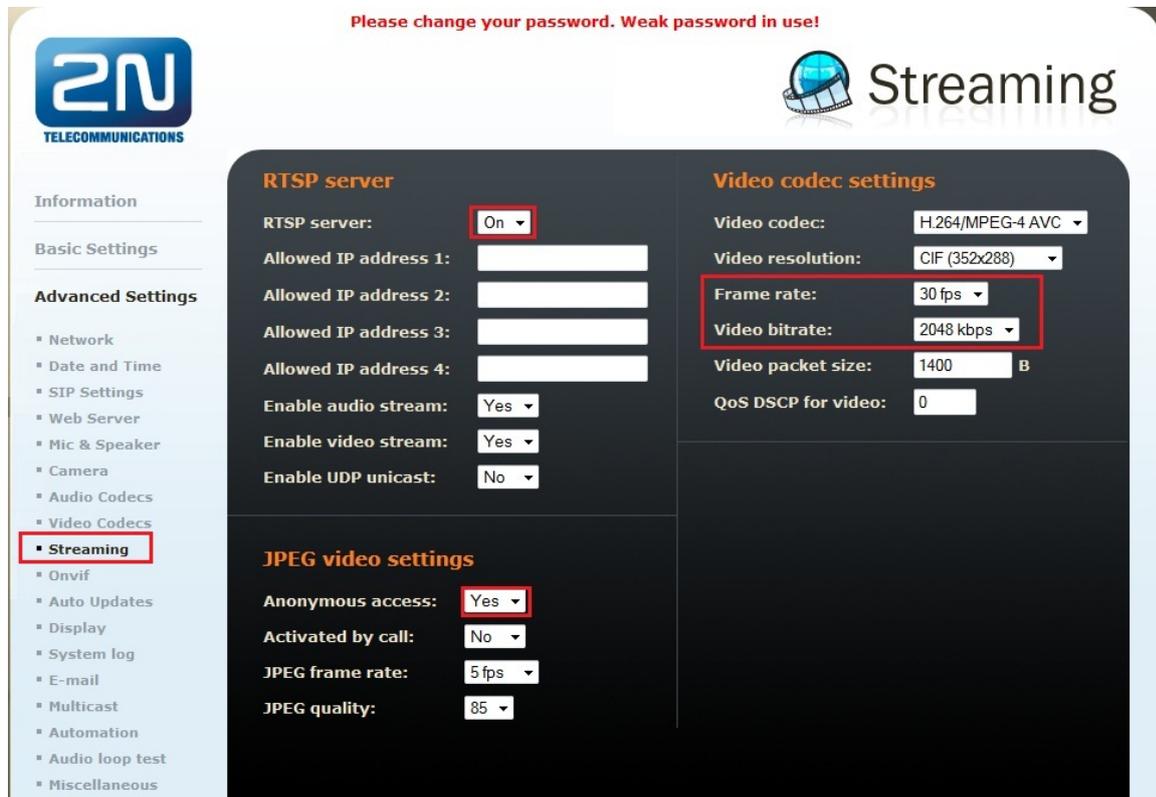

Please change your password. Weak password in use!

2N TELECOMMUNICATIONS

Streaming

RTSP server

RTSP server:

Allowed IP address 1:

Allowed IP address 2:

Allowed IP address 3:

Allowed IP address 4:

Enable audio stream:

Enable video stream:

Enable UDP unicast:

Video codec settings

Video codec:

Video resolution:

Frame rate:

Video bitrate:

Video packet size: B

QoS DSCP for video:

JPEG video settings

Anonymous access:

Activated by call:

JPEG frame rate:

JPEG quality:

Information

Basic Settings

Advanced Settings

- Network
- Date and Time
- SIP Settings
- Web Server
- Mic & Speaker
- Camera
- Audio Codecs
- Video Codecs
- **Streaming**
- Onvif
- Auto Updates
- Display
- System log
- E-mail
- Multicast
- Automation
- Audio loop test
- Miscellaneous

2N Helios IP Vario CZ | EN Logout

Services 

- Phone
- Streaming >
- E-Mail
- Automation
- User Sounds
- Web Server
- Audio Test

RTSP Server Enabled

Streams Settings ▾

- Audio Stream Enabled
- Video Stream Enabled

Video Parameters ▾

- Video Codec
- Video Resolution
- Video Framerate
- Video Bitrate

Authorised IP Addresses ▾

- IP Address 1


Transmission Quality Settings ▾

- QoS DSCP Value
- UDP Unicast Enabled


 Apply

VLC media player settings (version 2.0.5 Twoflower)

- Open you VLC media player and click on the "Media" tab on the top left corner. After that choose "Open Network Stream", go to section "Network" and fill in the IP address of 2N[®] Helios IP. Do not forget to use "rtsp" protocol! All these steps are figured in the picture below.

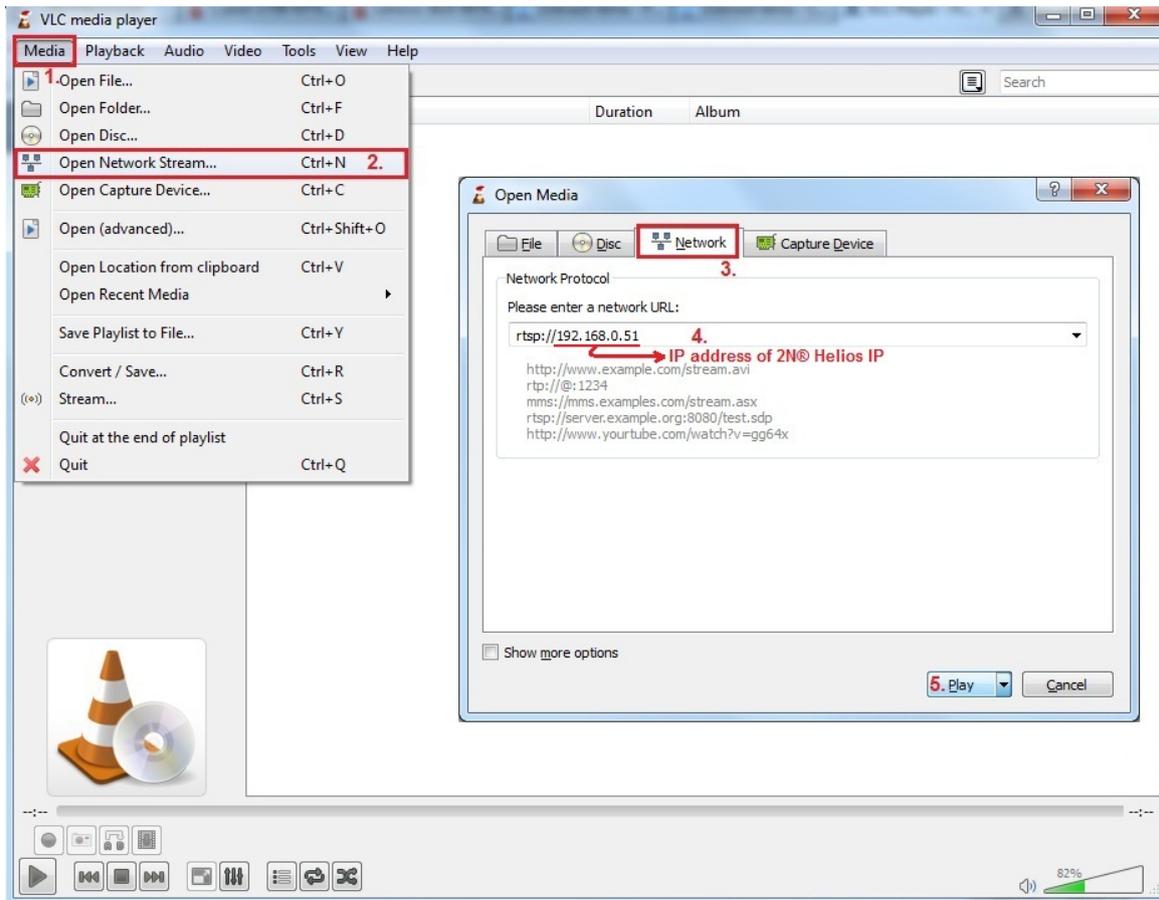

- Finally click on the "Play" button and streaming will start. You should see a stream in new window.

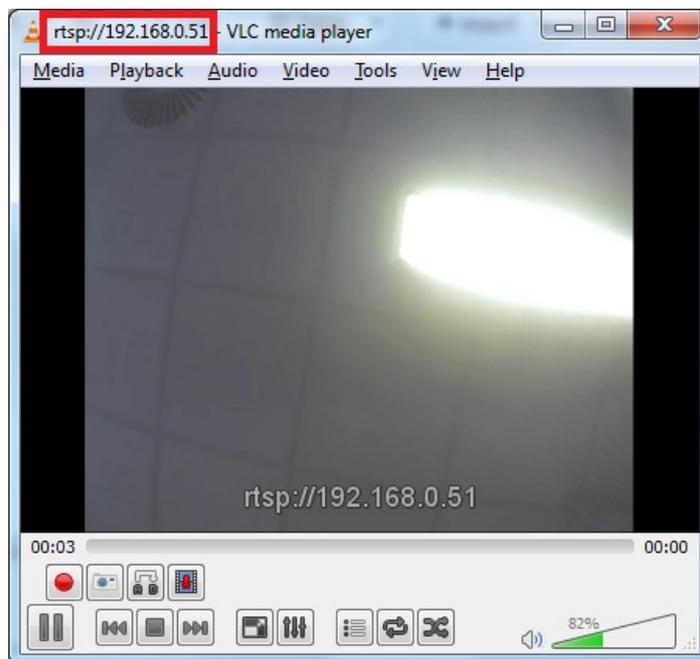

- If not, please make a trace and send it with configuration and network topology description to technical support!

More product information:



Door & Security Intercoms (Official Website 2N)