

# APPLICATION Note

TELECOM SOLUTIONS FOR THE 21ST CENTURY

Using the AES-2000 with Multiple C-3000 Controllers

November 9, 2007

# Expand Capacity of the AES-2000/C-3000 Combination from 96 Tenants Up to 288 Tenants



Model AES-2000

A bank of eight **C-3000**'s has a 96 tenant capacity. By using a **C-1000B**, three groups of eight **C-3000**'s can be combined, expanding tenant capacity up to 288.

Model C-3000



Model C-1000B



http://www.vikingelectronics.com

Phone...715.386.8861

## Installation

The following steps are to be used in conjunction with the diagram on the following page (page 2).

Step 1.	Connect a pair of wires from the <b>AES-2000</b> 's <b>C-3000</b> screw terminals to the <b>C-1000B</b> 's <b>LINE OUT TO PHONES</b> screw terminals.
Step 2.	To connect the first group of eight <b>C-3000</b> s: Connect the <b>C-1000B</b> 's <b>LINE IN</b> screw terminals to the Master 1 <b>C-3000</b> 's <b>ENTRY 1</b> screw terminals.
Step 3.	To connect the second group of eight C-3000s: Connect the C-1000B's DOOR BOX 1 terminals to Master 2 C-3000's ENTRY 1screw terminals.
Step 4.	To connect the third group of eight <b>C-3000</b> s: Connect the <b>C-1000B</b> 's <b>DOOR BOX 2</b> terminals to Master 3 <b>C-3000</b> 's <b>ENTRY 1</b> screw terminals.
Step 5.	Set DIP switch 3 of the <b>C-1000B</b> to the OFF position.
Step 6.	A telephone line can be connected to the <b>AES-2000</b> 's CO screw terminals for remote <b>AES-2000</b> programming or calling tenants that do not have phone service.

Note: Connect the group of eight C-3000s in a Master/Slave configuration as shown in the C-3000 Technical Practice.


# **Programming**

For the **AES-2000** and the **C-3000** to work in harmony, program them to have identical phone entry Call Times and Ring Counts. Failure to do so will result in unexpected disconnect. The **AES-2000** Call Time and Ring Count fields are found in the Building Selection's "Setup" pull down menu, under "Parameters." See the **C-3000** Technical Practice, **Programming** section **B** for programming the Call Time and Ring Count on the **C-3000**s.

When programming the **AES-2000**'s Apartment Selection screen, a "**C**" in entered before the tenant's phone number to access the first **C-3000** group. The second and third **C-3000** groups require a"**C**" and a "#1" or a "#2" before the tenant's phone number.

For Example: C01 - C96 for group one, C#1,01 - C#1,96 for group two, C#2,01 - C#2,96 for group three.

Important: The comma shown in the dialing string is for a 2 second pause, which is required for the C-1000A to switch to group 2 or 3.

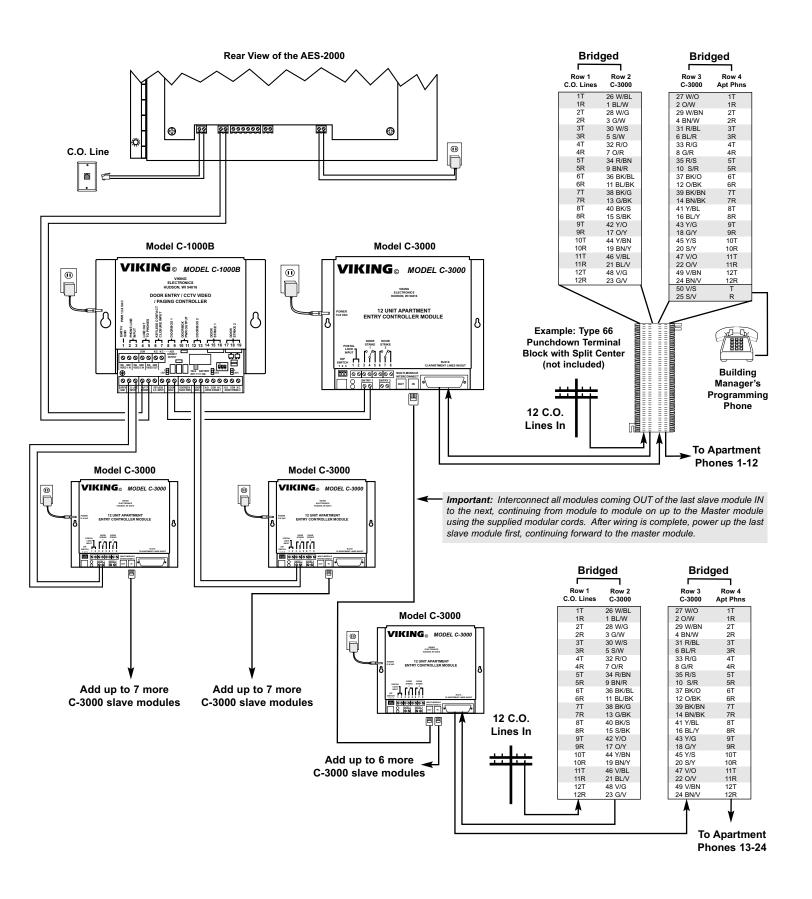

### Product Support Line...715.386.8666

#### Fax Back Line...715.386.4345

Due to the dynamic nature of the product design, the information contained in this document is subject to change without notice. Viking Electronics, and its affiliates and/or subsidiaries assume no responsibility for errors and omissions contained in this information. Revisions of this document or new editions of it may be issued to incorporate such changes.