

Quick Guide


To use this unit in your country, first change the unit's region setting to match your country. Change the unit's display language as needed.

Refer to "Changing the unit's region setting" in the operating instructions.

Connections

Base unit

- Use only the supplied Panasonic AC adaptor.

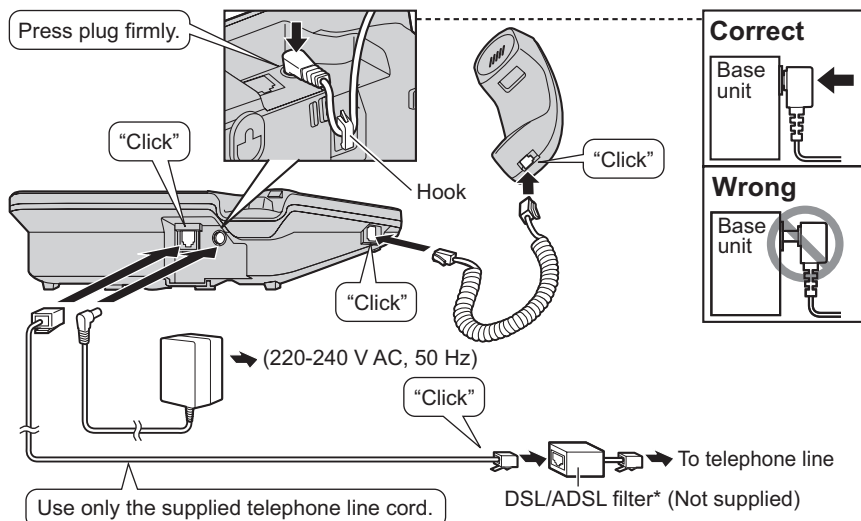

*For DSL/ADSL service users


Important:

- If you use a telephone line cord which is not supplied, the unit may not work properly.
- When the language selection is displayed after connecting the AC adaptor for the first time, you can select your desired language.

[▼]/[▲]: Select your desired language. → **OK** → [↵]


Charger

- Use only the supplied Panasonic AC adaptor.

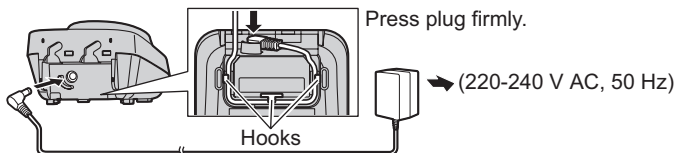

Battery installation/Battery charge

Charge for about 7 hours.

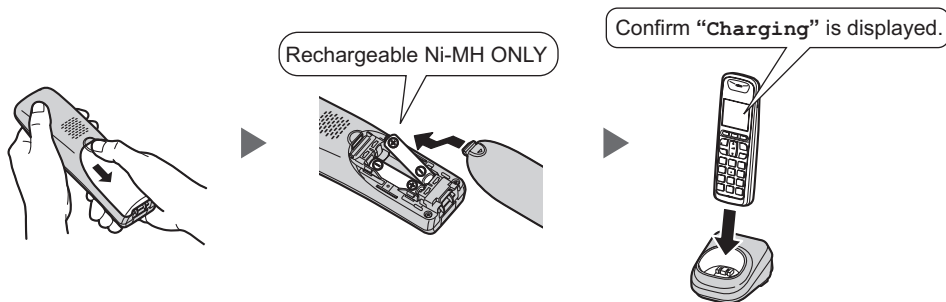

Note:

- USE ONLY Ni-MH batteries AAA (R03) size.
- Do NOT use Alkaline/Manganese/Ni-Cd batteries.
- When the language selection is displayed after installing the batteries for the first time, you can select your desired language.
 [▼]/[▲]: Select your desired language. → **OK** → [↶/⊙]

Operating tips

Navigator key/Volume key (⏪, ⏩)

■ Scrolling through lists or items

By pressing this key ([▲] or [▼]) repeatedly, you can scroll through (up or down) various lists or items.

■ Adjusting the volume

By pressing this key ([▲] or [▼]) repeatedly, you can adjust the receiver or speaker volume (up or down) while talking.

■ Moving the cursor

Base unit*1: [▲], [▼], [◀], or [▶]

Base unit*2: [▲], [▼], [◀], or [▶]

Handset: [▲] or [▼]


By pressing the above keys repeatedly, you can move the cursor to edit a number or name.

*1 KX-TG6451

*2 KX-TG6461

■ KX-TG6451

Base unit

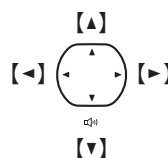


Handset



■ KX-TG6461

Base unit

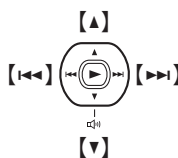

Handset

 


Soft keys

 
Each unit features 3 soft keys. By pressing a soft key, you can select the feature shown directly above it on the display.

, and other additional functions are assigned to the soft keys. Pay attention to the display to see what functions the soft keys are assigned during operation.

Base unit

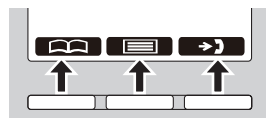

Handset

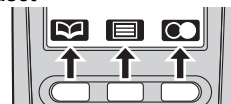

Display language (Base unit) (default: English)

16 display languages are available.

You can select “Deutsch”, “English”, “Magyar”, “Polski”, “Slovenčina”, “Čeština”, “Hrvatski”, “Slovenscina”, “Eesti”, “Lietuviškai”, “Latviešu”, “Română”, “Български”, “Srpski”, “Македонски”, or “Shqip”.

If you select a language you cannot read:

Important:

• If the unit is not in standby mode, press [].

1 [] (middle soft key)

2 [] 3 times → **OK** 3 times → []/[]: Select your desired language. → **OK** → []

Display language (Handset) (default: English)


16 display languages are available.

You can select “Deutsch”, “English”, “Magyar”, “Polski”, “Slovenčina”, “Čeština”, “Hrvatski”, “Slovenscina”, “Eesti”, “Lietuviškai”, “Latviešu”, “Română”, “Български”, “Srpski”, “Македонски”, or “Shqip”.

If you select a language you cannot read:

Important:

• If the unit is not in standby mode, press [].



1 [] (middle soft key)


 
2 [] 4 times → **OK**



 
3 [] 2 times → **OK** 2 times → []/[]: Select your desired language. → **OK** → []

Dialling mode (Handset) (default: Tone)


1 [] (middle soft key)

2 []/[]: “Base Unit Setup” → **OK**

3 []/[]: “Dial Mode” → **OK**

4 []/[]: Select the desired setting. → **OK** → []

Date and time (Handset)

1 [] (middle soft key)

 
2 []/[]: “Handset Setup” → **OK**

3 []/[]: “Time Settings” → **OK**

4 []/[]: “Set Date/Time” → **OK**



 

 
 
 
 

 





 





 


 









5 Enter the current date, month, and year. → **OK**

6 Enter the current hour and minute.

7 **OK** → []

Basic operations

Making/Answering calls (Base unit/Handset)

Making calls	<p>Base unit: Dial the phone number. → Lift the corded handset, or press .</p> <p>Handset: Dial the phone number. → /.</p>
Answering calls	<p>Base unit: Lift the corded handset, or press .</p> <p>Handset: /.</p>
To hang up	<p>Base unit: Place the corded handset on the cradle. When the speakerphone is used, press .</p> <p>Handset: .</p>
To adjust the receiver or speaker volume	Press  or  repeatedly while talking.
Making a call using the redial list	<p>1 Proceed with the operation for your unit. Base unit:  Handset:  (right soft key)</p> <p>2 /: Select the desired phone number.</p> <p>3 Proceed with the operation for your unit. Base unit: Lift the corded handset. Handset: </p>
Temporary tone dialling (for rotary/pulse service users)	<p>1 Make a call.</p> <p>2 Press  when prompted to enter your code or PIN, then press the appropriate dial keys.</p>
To adjust the ringer volume	<p>Base unit:</p> <p>1  (middle soft key)</p> <p>2 /: “Ringer Setup” → OK</p> <p>3 /: “Ringer Volume” → OK</p> <p>4 /: Select the desired volume. → OK → </p> <p>Handset:</p> <p>1  (middle soft key)</p> <p>2 /: “Handset Setup” → OK</p> <p>3 /: “Ringer Setup” → OK</p> <p>4 /: “Ringer Volume” → OK</p> <p>5 /: Select the desired volume. → OK → </p>

Basic operations

Phonebook (Base unit/Handset)

Adding entries

- 1 Proceed with the operation for your unit.
Base unit: (left soft key) → → **[▼]/[▲]:** "New Entry" → **OK**
Handset: (left soft key) → → **[▼]/[▲]:** "New Entry" → **OK**
- 2 Enter the party's name (16 characters max.). → **OK**
 - You can change the character entry mode by pressing **1/A/?**.
 - To enter a name, see the character table in the operating instructions.
- 3 Enter the party's phone number (24 digits max.). → **OK** 2 times
- 4 Proceed with the operation for your unit.
Base unit: **[↵]**
Handset: **[↵]**

Making calls

- 1 (left soft key) → **[▼]/[▲]:** Select the desired entry.
- 2 Proceed with the operation for your unit.
Base unit: Lift the corded handset.
Handset: **[↵]**

Answering system (Base unit): KX-TG6461

Answering on/off

Press **[☎]** to turn on/off the answering system.

Listening to messages

[▶]

Frequently asked questions

Question

Cause/solution

Why is flashing?

- The handset is too far from the base unit. Move closer.
- The base unit's AC adaptor is not properly connected. Reconnect AC adaptor to the base unit.
- You are using the base unit or handset in an area with high electrical interference. Re-position the base unit and use the handset away from sources of interference.
- The handset is not registered to the base unit. Register it (page 7).



 

Why can I not make calls?

- The dialling mode may be set incorrectly. Change the setting (page 3).

What should I do when the handset does not turn on?

- Make sure the batteries are installed correctly.
- Fully charge the batteries.
- Clean the charge contacts and charge again.


Frequently asked questions

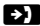
Question	Cause/solution
How long is the battery operating time?	<ul style="list-style-type: none"> ● When you are using fully-charged Ni-MH batteries (supplied batteries); In continuous use: 18 hours max. Not in use (standby): 170 hours max. ● It is normal for batteries not to reach full capacity at the initial charge. Maximum battery performance is reached after a few complete cycles of charge/discharge (use). ● Actual battery performance depends on a combination of how often the handset is in use and how often it is not in use (standby).
Can I keep the handset on the charger when I am not using it?	<ul style="list-style-type: none"> ● Even after the handset is fully charged, the handset can be left on the charger without any ill effect on the batteries.
When should I replace the batteries?	<ul style="list-style-type: none"> ● If the batteries are fully charged until  is displayed, but  is displayed after a few calls, replace the batteries with new ones.
What is a PIN?	<ul style="list-style-type: none"> ● The PIN is a 4-digit number that must be entered in order to change certain base unit settings. The default PIN is "0000".
What should I do to display caller information?	<ul style="list-style-type: none"> ● You must subscribe to a Caller ID service. Contact your service provider/telephone company for details. ● The message "You must first subscribe to Caller ID." will be displayed until you receive caller information after subscribing to a Caller ID service.
What should I do when noise is heard, sound cuts in and out?	<ul style="list-style-type: none"> ● You are using the base unit or handset in an area with high electrical interference. Re-position the base unit and use the handset away from sources of interference. ● Move closer to the base unit. ● If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details.
What should I do when the operating time seems to be shorter even after I fully charged the batteries?	<ul style="list-style-type: none"> ● Clean the battery ends (+, -) and the charge contacts with a dry cloth and charge again.
What do I need to do to erase → (Missed call) from the display?	<ul style="list-style-type: none"> ● There are unviewed missed calls remaining. View them and erase → in the following way. Base unit: 1  (right soft key) 2 Press [▼] to search from the most recent call, or press [▲] to search from the oldest call. Handset: 1  (middle soft key) 2 [▼]/[▲]: "Caller List" → OK 3 Press [▼] to search from the most recent call, or press [▲] to search from the oldest call.

Registering a handset to the base unit

 
The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit, re-register the handset.

Handset

- 1  (middle soft key)
- 2 [**▼**]/[**▲**]: "Handset Setup" → **OK**
- 3 [**▼**]/[**▲**]: "Register H.set" → **OK**

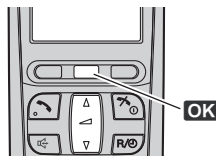

Base unit

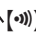Press and hold  for about 5 seconds, until the registration tone sounds.

- The next step must be completed within 90 seconds.

■ KX-TG6451




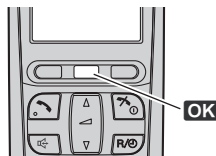
■ KX-TG6461



Handset

Wait until "Base PIN" is displayed. → Enter the base unit PIN (default: "0000"). → **OK**

- When the handset has been registered successfully,  stops flashing.



Optional service (Caller ID)

If you subscribe to a Caller ID service,



caller information will be displayed when a call is received, or when viewing missed calls.