



### Pro bezpečnost vašich dětí

Tento výrobek může obsahovat malé části. Udržujte obal a malé části mimo dosah dětí.

### A gyermekek biztonsága érdekében

A termék kisméretű alkatrészeket tartalmazhat. A csomagolást és a kis alkatrészeket gyermekek elől elzárva tartsa.

### Per la sicurezza dei bambini:

si ricorda che il prodotto può contenere parti di piccole dimensioni. Tenere la confezione e le parti di piccole dimensioni lontano dalla portata dei bambini.

### Voor de veiligheid van uw kinderen.

Hou er rekening mee dat dit product kleine onderdelen kan bevatten. Zorg ervoor dat de verpakking en de kleine onderdelen buiten het bereik van uw kind worden gehouden.

### For dine barns sikkerhet

Vær oppmerksom på at dette produktet kan inneholde små deler. Påse at innpakningen og små deler holdes utenfor ditt barns rekkevidde.

### Bezpieczeństwo dzieci

Pamiętaj, że ten produkt może zawierać małe elementy. Przechowuj opakowanie i małe elementy poza zasięgiem dziecka.

### Para a segurança das crianças

Tenha em atenção que este produto pode conter peças de pequenas dimensões. Mantenha a embalagem e as peças pequenas fora do alcance das crianças.

### För barnens säkerhet

Observera att den här produkten kan innehålla smådelar. Se till att förpackningen och smådelarna förvaras utom räckhåll för barn.

### Af hensyn til dine børns sikkerhed

Vær opmærksom på, at dette produkt kan indeholde små dele. Sørg for, at både pakning og små dele opbevares utilgængeligt for børn.

### Para la seguridad de sus hijos

Tenga en cuenta que este producto puede incluir piezas pequeñas. Asegúrese de mantener el embalaje y las piezas pequeñas fuera del alcance de los niños.

### Lastesi turvallisuuden vuoksi

Huomaa, että tämä tuote voi sisältää pieniä osia. Varmista, että pakkaus ja pienet osat pidetään poissa lapsesi ulottuvilta.

### Pour la sécurité de vos enfants

Veuillez ne pas oublier que ce produit peut comprendre des petites pièces. Assurez-vous que le paquet et les petites pièces sont gardés hors de portée de votre enfant.

### For the safety of your children

Please be aware that this product may include small parts. Ensure that the package and small parts are kept out of reach from your child.

### Για την ασφάλεια των παιδιών σας

Έχετε υπόψη σας ότι το προϊόν αυτό μπορεί να περιέχει μικρά εξαρτήματα. Βεβαιωθείτε ότι η συσκευασία και τα μικρά εξαρτήματα φυλάσσονται σε μέρος που δεν έχουν πρόσβαση τα παιδιά σας.

**Bellman®audio**  
FOR EASY COMMUNICATION™



**Bellman & Symfon®**

**Bellman & Symfon AB**  
Södra Långebergsgatan 30  
SE-421 32 Västra Frölunda Sweden  
Tel. +46 31 68 28 20 Fax. +46 31 68 28 90  
info@bellman.com www.bellman.com

BE2020\_005MAN014

 
 


# Bellman Audio Maxi

Digital communication aid

MODEL: BE2020

- APP
- SE
- PT
- PL
- NO
- NL
- IT
- HU
- GR
- FR
- FI
- ES
- EN
- DK
- DE
- CZ

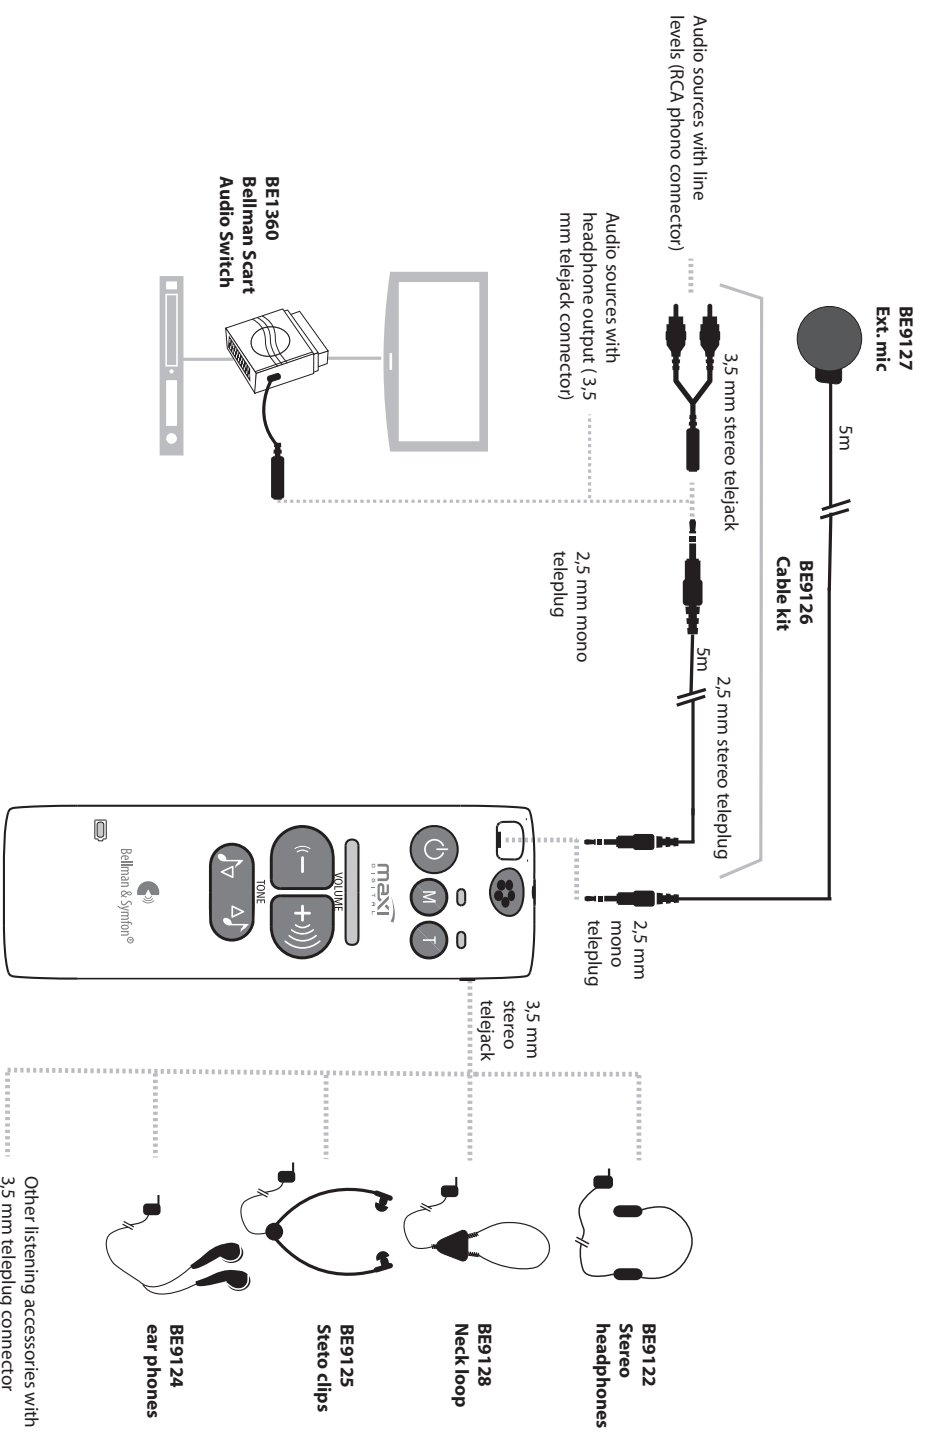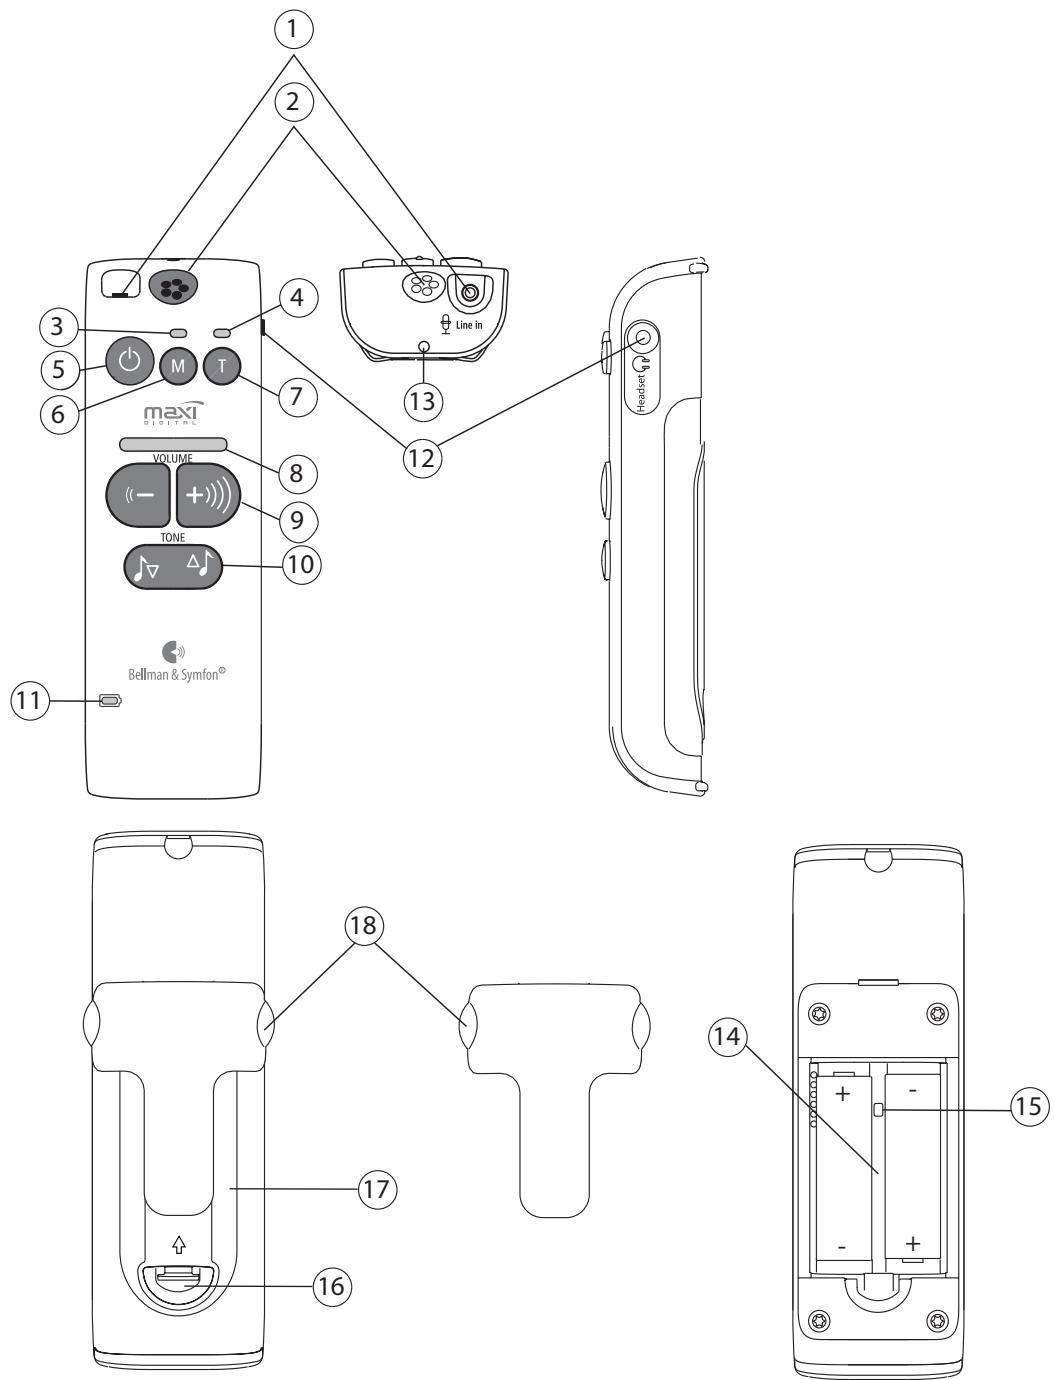

## Bellman® Audio Maxi Digital Communication Aid, BE2020

---

*Thank you for choosing products from Bellman & Symfon.*




*Bellman Audio is an assistive listening system. The system consists of a number of units which facilitate listening under different circumstances. Bellman Audio products make everyday life easier for many people and give them the freedom to freely pursue their interests.*

*Read through the entire user manual first before starting to use the product.*




*Refer to the diagram showing the accessories and connection options on the inside of the cover.*




### Getting started

#### Unpacking, installing and testing the unit

1. Open the battery cover (17) by pressing the battery cover lock (16) in the direction of the arrow. Fit the batteries and make sure they have been inserted the right way round. Follow the markings in the battery compartment (14). Only use AA alkaline type batteries. Do not use force to press down the batteries. Close the battery cover (17) and check that the lock (16) locks with a click.
2. Connect BE9122 Bellman Headphones, BE9128 Bellman Neck Loop, BE9125 Bellman Stetoclip, BE9124 Bellman Ear Phones or another product recommended by Bellman & Symfon to the green headphone output (12) on the right-hand side.
3. Give one short press on the On/Off button  (5) to start Maxi. The LEDs (3 and 4) above the Microphone selection button  (6) and the Telecoil selection button  (7) will blink while Maxi starts.

Maxi always starts with the internal microphone (2) selected as a sound source. In addition, the volume control is always set to low volume to avoid unpleasant sound levels.

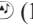Use the volume control  (9) to control the sound level.  increases and  reduces the volume. The Volume and Tone LED Indicator (8) shows the sound level. The more LEDs that are lit the higher the volume. The LED indicator goes out 3 seconds after the sound volume has been set.

Use the tone control  (10) to adjust the sound quality.  increases and  reduces the treble. The Volume and Tone LED Indicator (8) shows the tone setting. The LED indicator goes out 3 seconds after the sound quality has been set.

When you have finished, you can switch off Maxi by giving a short press on the On/Off button  (5).

**Please note:** The BE2020 Bellman® Audio Maxi digital communication aid is not a hearing instrument. Bellman & Symfon AB recommend that anyone who is experiencing hearing loss should consult a doctor.

**Warning!** The BE2020 Bellman® Audio Maxi digital communication aid has a very powerful amplifier and the sound level can cause discomfort or, in serious cases, endanger hearing if the product is used carelessly. Always turn the volume down to a low level before putting on the headphones!

**Warning!** If the BE2020 Bellman® Audio Maxi digital communication aid is used together with a neck loop, e.g. BE9128 (accessory), the inductive loop (T position) should not be selected as a

signal source, because this can cause powerful inductive feedback. Feedback together with a high sound level can cause discomfort or, in serious cases, endanger your hearing.

**Warning!** The Bellman® Audio Maxi digital communication aid uses AA alkaline type batteries. Do not expose batteries to fire or direct sunlight.

## Function

The BE2020 Bellman® Audio Maxi Digital Communication Aid is a digital amplifier which has been specifically developed to provide an exceptional sound experience even in demanding situations. Maxi works extremely well for speech and music with the built-in microphone, with an external microphone (accessory) or with other external sound sources.

### Built-in microphone

The built-in microphone (2) is located under the rubber cap on the top of the front panel.

The microphone is an omnidirectional one.

### Telecoil



The built-in telecoil is angled at 45 degrees in order to catch inductive signals from an inductive loop in both the horizontal position (in the hand or on a table) and vertical position (on a clip or neck strap).



The T position can be used in premises where an inductive loop (or hearing loop) has been fitted. Look for the inductive loop symbol or ask staff whether there is an inductive loop if you are unsure.

### Selecting the signal source


It is easy to select the sound source.

- The user can manually choose between the internal microphone (M position) or built-in telecoil (T position) by pressing the buttons  (6) and  (7) on the front. When switching between these, the volume control will be set to a low level to avoid unpleasant sound levels.
- If something is connected to the external sound source input, Maxi automatically selects this. When you remove it, Maxi is automatically connected to the internal microphone (M position).


### External sound source

If the user connects an audio cable (accessory BE9126) between the red 2.5 mm tele jack and a sound source (SCART connector, hi-fi equipment, MP3 player etc.), this sound source is selected instead. The input sensitivity is automatically adjusted to adjust the signal strength to these sound sources. The internal microphone (2) is switched off in this position.

 
 
 
### Combined signal sources

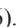When you have connected a sound source to the External sound source input (1), this sound source can be combined with the sound that the internal microphone (2) receives. This is done by holding down the  button (6).

The sound from the sound source connected to the External sound source input (1) is reduced and the internal microphone is connected so that you can, for example, perceive sound or converse with somebody else. The Microphone LED (3) blinks while the button is held down.

When you want to return to listening to the signal source connected to the External sound source input (1), release the  button (6). The internal microphone is then disconnected and the external sound source returns to normal volume again.

## Clip

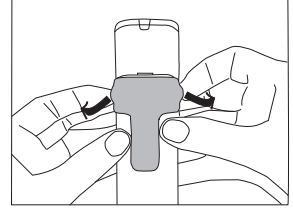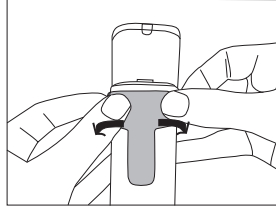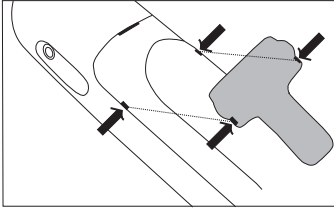

*Place the clip against the battery cover and press firmly so that it locks on.*

*Remove the clip by using the small round handles and pressing out from the sides.*

## Indicators and settings

### Volume and Tone LED Indicator

The Volume and Tone LED Indicator (8) is used as an indicator for the volume and tone controls.



The Volume and Tone LED Indicator goes out after about 3 seconds to save power.

### Low battery LED


The Low battery LED (11) is normally off, but comes on when the battery level falls below about 10 hours' remaining operating time. This time depends, of course, on the sound volume and type of listening accessories used.


When the Low battery LED (11) blinks every seven seconds, the batteries should be replaced with new ones. Only use AA alkaline type batteries.

### Volume control



Maxi has a digital volume control  (9), which means that you can increase or reduce the volume with the pushbuttons  (9). Each press results in an increase or reduction in volume by one increment.

If you hold one of the volume buttons down for more than 1 second, the volume will increase or reduce by one increment per second as long as the button is held down or until the minimum or maximum position is reached.


By pressing the  button (9), the volume is increased by one increment at a time until the maximum volume is reached. At full volume all the LEDs of the Volume and Tone LED Indicator (8) are illuminated.


By pressing the  button (9), the volume is reduced by one increment at a time until the minimum volume is reached, although Maxi never becomes totally silent. At minimum volume only the left LED of the Volume and Tone LED Indicator (8) is illuminated.

## Tone control

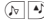BE2020 has a digital tone control  (10), which means that you can increase or reduce the treble with the pushbuttons  (10). Each press results in an increase or reduction in treble by one increment.

If you hold one of the tone buttons down for more than 1 second, the treble will increase or reduce by one increment per second as long as the button is held down or until the minimum or maximum position is reached.

By pressing the  button (10), the treble is increased by one increment at a time until maximum treble is reached. At maximum treble, the LED at the far right of the Volume and Tone LED Indicator (8) is illuminated.



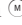


By pressing the  button (10), the treble is reduced by one increment at a time until minimum treble is reached. At minimum treble, the LED at the far left of the Volume and Tone LED Indicator (8) is illuminated.

When the centre LED of the Volume and Tone LED Indicator (8) is illuminated, treble is deactivated.

## Troubleshooting in brief

Symptom	Solution
Nothing happens when you try to start Maxi using the On/Off button.	<ul style="list-style-type: none"> <li>Change the batteries. Only use AA alkaline type batteries.</li> </ul>
No sound can be heard in the headphones when Maxi is switched on.	<ul style="list-style-type: none"> <li>Check that the correct signal source has been selected, e.g. internal microphone (M position).</li> </ul>

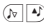For further information about the product in English, refer to the Appendix.

- |  |  |
|--|--|
| 1. External sound source input 2.5 mm tele jack  | 10. Tone control  |
| 2. Internal microphone   | 11. Low battery LED  |
| 3. Microphone LED  | 12. Headphone output 3.5 mm tele jack  |
| 4. Telecoil LED  | 13. Neck strap attachment  |
| 5. On/Off button                | 14. Battery compartment  |
| 6. Microphone Selection Button  | 15. Setting button   |
| 7. Telecoil Selection Button    | 16. Battery cover lock   |
| 8. Volume and Tone LED Indicator   | 17. Battery cover  |
| 9. Volume control               | 18. Clip   |