

geemarc™ AMPLIDECT™ 595 U.L.E.

Hear the Difference



USER GUIDE

English

TABLE OF CONTENTS

1.	IMPORTANT SAFETY INSTRUCTIONS	1
2.	SET UP THE TELEPHONE	2
2.1	Package Contents	2
2.2	Location	2
2.3	Connect the Corded Base Station	3
2.4	Install and Charge the Handset Battery	4
3.	GET TO KNOW YOUR PHONE	5
3.1	Overview of the Handset	5
3.2	Overview of the Corded Base	8
3.3	Handset LCD Display Icons and Symbols	10
3.4	Handset Menu Structure	11
3.5	Text and Digit Entry Table	12
3.5.1	English Character Set	12
4.	USE YOUR PHONE	13
4.1	Make an External Call	13
4.1.1	Preparatory Dialing	13
4.1.2	Direct Dialing	13
4.1.3	Call from the Phonebook	13
4.1.4	Call from the Call List	13
4.1.5	Call from the redial list	14
4.1.6	Call timer	14
4.2	Answer a Call	14
4.3	BOOSTER Function	14
4.4	End a Call	15
4.5	Adjust Earpiece and Speakerphone Volume	15
4.6	Mute a Call	15
4.7	Redial the Last Number	16
4.7.1	Redial a Number from the Redial List	16
4.7.2	Store a Redial Number into the Phonebook	16
4.7.3	Delete a Redial Number	16
4.7.4	Delete the Entire Redial List	16
4.8	Find the Handset	17
4.9	Make an Internal Call	17
4.9.1	Intercom	17
4.9.2	Call All Handsets	18
4.9.3	Transfer an External Call	18
4.9.4	Make a 3-way Conference Call	18
5	PHONEBOOK	19
5.1	Add a New Phonebook Entry	19
5.2	Search for a Phonebook Entry	19
5.3	View a Phonebook entry	19

5.4	Edit a Phonebook Entry.....	20
5.5	Delete a Phonebook Entry.....	20
5.6	Delete the Entire Private Phonebook.....	20
5.7	Check the Phonebook Usage.....	21
5.8	Set the Fast Dial Numbers.....	21
5.8.1	Add or Edit the Fast Dial Number.....	21
5.8.2	Delete one or all Speed Dial Number.....	21
5.9	VIP setting.....	22
5.9.1	Set the VIP number.....	22
5.9.2	View the VIP list.....	22
5.9.3	Delete or delete all VIP number.....	22
5.9.4	Status of the VIP.....	22
6	CALLER DISPLAY (NETWORK DEPENDENT).....	23
6.1	View the Call List.....	23
6.2	More information on the call log.....	23
6.3	Store a Call List Number into the Phonebook.....	23
6.4	Store a call list number into the black list.....	23
6.5	Delete an Entry in the Call List.....	24
6.6	Delete the Entire Call List.....	24
7	FUNCTION CALL BLOCK.....	25
8	PICTURE BIG BUTTON MEMORY (BASE).....	25
9	PHONE SETTINGS.....	26
9.1	Handset Settings.....	26
9.1.1	Set the Ringer Melody for Internal Calls.....	26
9.1.2	Set the Ringer Melody for External Calls.....	26
9.1.3	Set the Ringer Volume.....	27
9.1.4	Set Alert Tones.....	27
9.1.5	Set the Handset Language.....	27
9.1.6	Clock setting.....	28
	8.1.6.1 Set the date format.....	28
	8.1.6.2 Set the time format.....	28
	8.1.6.3 Set the Time & Date.....	28
9.1.7	Registration.....	29
9.1.8	Reset your phone.....	29
9.2	Base Settings with the handset.....	30
9.2.1	Set the Ringer Melody.....	30
9.2.2	Set the ringer volume.....	30
9.2.3	Set the Flash Time.....	30
9.2.4	Remove the first ringer.....	30
10	SOS EMERGENCY CALL.....	31
10.1	SOS setting.....	31
10.2	Make a SOS calls.....	31
10.3	Select the SOS language.....	31

10.4	Record SOS message.....	32
10.5	Play SOS message	32
10.6	Delete the SOs message.....	32
11	ALARM SETTING	33
11.1	Turn ON/OFF the Alarm	33
11.2	Rename the Alarm	33
11.3	Set the alarm melody.....	33
11.4	Voice memo for the Alarm	34
11.5	Play a voice Memo	34
11.6	Delete a voice memo.....	34
12	TALKING FUNCTION	34
13	ANSWERING MACHINE.....	35
13.1	Switching Answering Machine On/Off.....	35
13.2	Play Messages on TAM.....	35
13.3	Delete all Messages on TAM	36
13.4	Record Memos on TAM.....	36
13.5	TAM Settings	37
13.5.1	Record your Outgoing Message (OGM)	37
13.5.2	Playback the Outgoing Message (OGM)	37
13.5.3	Delete a Personalized OGM (SET OGM to DEFAULT)	38
13.5.4	Set the Answer Delay	38
13.5.5	Set the Recording Time of Incoming Message.....	38
13.5.6	Set the TAM Language.....	39
13.5.7	Turn On or Off the Base Screening	39
13.5.8	Activate Remote Access	39
13.5.9	Change the 4-Digit Remote Access PIN	39
13.5.10	Activate or Deactivate the Remote access	40
13.5.10.1	MSG alert function.....	40
10.5.10.3	Remote Operations	41
14	DEVICES SETTING	42
14.1	Set devices.....	42
14.2	Devices	42
15	TROUBLESHOOTING.....	42
16	TECHNICAL SPECIFICATIONS.....	45
17	CARE AND MAINTENANCE INSTRUCTIONS.....	46
18	GUARANTEE.....	47
19	DECLARATIONS.....	47

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this product near water (for example, near a bath tub, kitchen sink, swimming pool).
5. Do not expose the telephone to direct sunlight or extreme cold environment. Do not put the telephone close to a heating source such as radiators, cookers, etc.
6. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
7. Unplug this product from the wall outlet and refer servicing to the distributor under The following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If the product does not operate normally by following the operating instructions.
 - If the product has been dropped and the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
8. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
9. Do not use the telephone to report a gas leak within the vicinity of the leak.
10. Use only the supplied NiMH (Nickel Metal Hydride) battery pack! The operation periods for the handsets are only applicable with the default battery capacities.
11. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or unit damages. The manufacturer will not be held liable for damage arising from such non-compliance.
12. Do not use third party charging bays. The battery may be damaged.
13. Battery should not be exposed to excessive heat such as bright sunshine or fire or immersed in water.
14. For pluggable equipment, the socket-outlet (power adaptor) should be installed near the equipment and be easily accessible.

Disposal warning

1. When this crossed-out wheeled bin symbol is attached to a product, it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products/battery should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance/battery will help prevent potential negative consequences for the environment and human health.



For more detailed information about disposal of your old appliance/battery, please contact your city office, waste disposal service or the shop where you purchased the product.

2. SET UP THE TELEPHONE

2.1 Package Contents

The package contains the following items:

- 1 Base station
- 1 Cordless handset
- 1 AC power adapter
- 3 NiMH rechargeable batteries
- 1 Telephone line cord
- 1 User's manual

2.2 Location

 
For maximum coverage and the reduction of interference, here are some guidelines you should consider where you place the base unit,

- Place it at a convenient, high, and central location with no obstructions between the handset and base unit in an indoor environment.
- Place it away from electronic appliances such as televisions, microwave ovens, radios, personal computers, wireless devices or other cordless phones.
- Avoid facing radio frequency transmitters, such as external antennas of mobile phone cell stations.
- Avoid plugging it into the same circuit as other major household electrical appliances because of the potential of interference. Try moving the other appliance or the base unit to another power outlet.

If the reception for a base unit location is not satisfactory, move it to another location for better reception.

Depending on the surrounding conditions as well as spatial and structural factors, the phone's signal range may be reduced. The range indoors is normally less than outdoors.

2.3 Connect the Corded Base Station

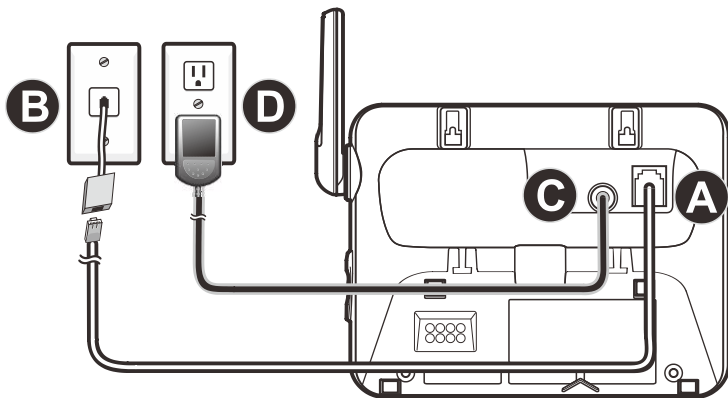

Connecting the telephone

Connect the telephone cable to the telephone line socket (A) and to the telephone wall socket (B).

Connect the power adapter jack to the base (and DC charger) (C) then connect the power adapter plug in mains power (D).

 
NOTE

Use only the power adapter supplied with the base station.

2.4 Install and Charge the Handset Battery

1. Slide the battery cover downwards.

Install the 3 batteries into the socket as indicated, matching correct polarity (+,-).

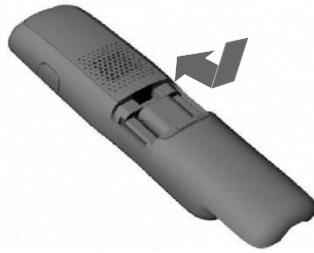

 
2. Align the cover flat against the battery compartment, and then slide it upwards until it clicks into place.
3. Charge the handset by placing it face forward in the base. You hear a beep when the handset is charging in the charger.
4. Charge the batteries for at least 12 hours when charging for the first time.

NOTES

- Only use the batteries provided or NiMH type rechargeable batteries. If the handset is not going to be used for a period of time, remove the batteries from the handset to prevent any possible battery leakage.

3. GET TO KNOW YOUR PHONE

3.1 Overview of the Handset

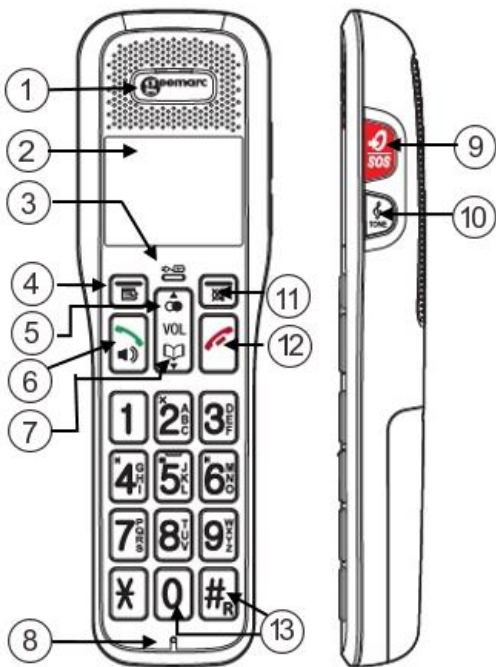

1. EARPIECE

2. LCD DISPLAY

3. CHARGE LIGHT ()

On steadily when the handset is in the charger.

4. SOFT KEYS MENU/OK ()

In idle mode: Press to access the main menu.

In sub-menu mode: Press to confirm the selection.

During a call: Press to access Intercom / Phonebook / Redial list / Call log.

5. UP/CALL LIST (▲

In idle mode: Press to access the call list.

In menu mode: Press to scroll up the menu items.

In phonebook list/redial list/call list: Press to scroll up the list.

In editing mode: Press to move the cursor one character to the left.

During a call: Press to increase the listening volume.

During ringing: Press to increase the ringer volume.

6. TALK ON Speakerphone

In idle/pre-dial mode: Press to make a call in earpiece mode.

In phonebook/redial list/call list: Press to make a call to the selected entry in the list, in earpiece mode.

During ringing: Press to answer a call in earpiece mode.

During a call: Press again to go into speakerphone mode. Press again to switch to earpiece mode.

7. DOWN/ PHONEBOOK LIST (

In idle mode: Press to access the Phonebook list.

In menu mode: Press to scroll down the menu items.

In phonebook list/redial list/call list: Press to scroll down the list.

In editing mode: Press to move the cursor one character to the right.

During a call: Press to decrease the listening volume.

During ringing: Press to decrease the ringer volume.

8. MICROPHONE

9. BOOSTER SOS KEY

During a call: Press to activate/deactivate the Volume BOOSTER function.

In idle mode: Press and hold for a couple of seconds to activate the emergency calling sequence set in your handset.

During the SOS alarm ringing: Press and hold for 2 seconds to stop the emergency SOS calling sequence set in your handset.

10. TONE KEY

During a call: press this key to increase the high frequency or the low frequencies. (treble, standard or bass)

11. INT/MUTE/CLEAR 

In main menu mode: Press to go back to idle screen.

In sub-menu mode: Press to go back to previous menu.

editing/pre-dial mode: Press to delete a character/digit.

In editing/pre-dial mode: Press and hold to delete all the characters/digits.

During a call: Press to mute/resume the microphone.

During ringing: Press to silence the handset ringer.

In idle mode: Press to intercom/page another handset. (More than one handset needs to be registered to the base unit for the intercom/page facility to work)

12. TALK OFF 

During a call: Press to end a call and go back to idle screen.

In menu/editing mode: Press to go back to idle screen.

13. ALPHANUMERIC KEYPAD, HASH R# or 0

 
In predial or editing mode: Press to insert a digit / character / 0/ #,

R#, on line: Press and hold to make a flash.

During a call: Press to answer a new call if you have subscribed to Call Waiting service from your service provider.

0 key in idle/pre-dial mode/number editing mode: Press and hold to insert a pause. A 'p' will be displayed.

3.2 Overview of the Base

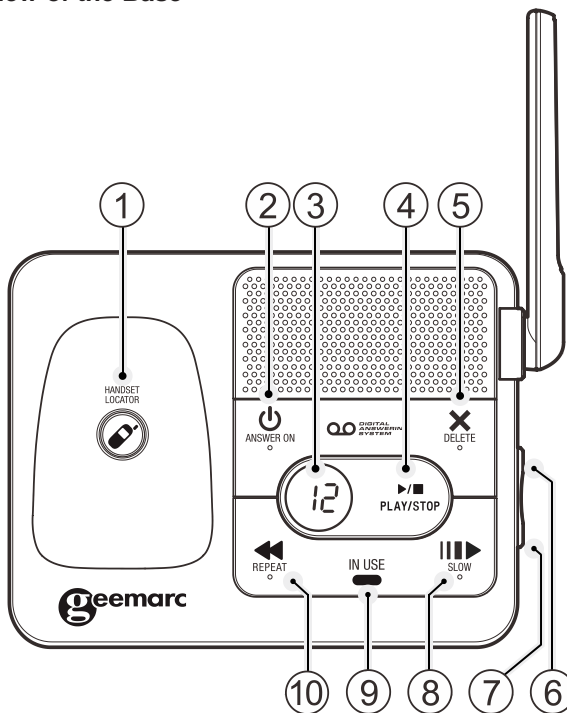

1 /HANDSET LOCATOR

While the phone is idle, press to page all handsets.

2. /ANSWER ON

Press to turn the built-in answering system on or off.

3. MESSAGE COUNTER

Displays the number of messages recorded.

4. /PLAY/STOP

Press to start or stop message playback.

5. - /DELETE

Press to delete the message currently playing.

Long press to delete all old/ listened to messages when the phone is in idle.

6. VOL (▲)

During message playback, press to increase the listening volume.

While in idle mode, press to increase the base ringer volume.

7. VOL (▼)

During message playback, press to decrease the listening volume. **While in idle mode**, press to decrease the base ringer volume.

8. |||▶ SLOW

During message playback, press the key to slow the listening speed

9. IN USE

On when handsets are in use, or when the answering system is answering and recoding an incoming call

BLINK : when the base unit is ringing.

10. /◀◀ REPEAT

 
During message playback, press to repeat a message.





 




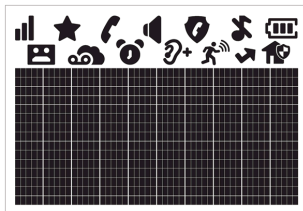


Press twice to play the previous message.

In idle mode : Press the key to record a memo and stop after recording.

a. Handset LCD Display Icons and Symbols



The screen display gives you information on the current status of the telephone.




	Indicates the current signal strength. More bars indicate a stronger signal strength. If the handset is too far from the base, this icon will disappear on the
	Steadily on when a call is in progress or an intercom call is in progress. Flashes when there is an incoming call.
	Steadily on when the speakerphone is turned on.
	Steadily on when the battery is fully charged. Animates when battery is
	Beep and Flashes when low battery is detected to indicate that it needs charging.
	Steadily on when the telephone answering machine (TAM) is turned on. Flashes when a new message is received on the answering machine.
	Steadily on when an alarm is set. Flashes when the alarm time set before reaches.
	Steadily on when there are received new Voice Message Waiting (VMWI) not yet read. Disappears when all the voice messages have been read.
	Steadily on when any block mode/ w/o num is enabled. Display in the call list for the blocked call entry.
	Steadily on when the ringer is switched off.
	Steadily on when there is (are) new call(s) in call list.
	Steadily on when the boost function is activated

b. Handset Menu Structure

In idle mode, pressing **LEFT SOFTKEY** will access the menu. Refer to the following for the menu structure.

Key Press LEFT SOFTKEY  

CALL LOG	PHOTO MEM	PHONEBOOK	CALL BLOCK	INTERCOM	BS SETTINGS
Review Call List	M0	ALL	BLACK LIST	HANSET BASE ALL	BS RINGER
Under a selected Call List entry:	M1	SPEED DIAL	LIST		RING VOL
DETAILS	M2	VIP	SETTINGS		FLASH TIME
ADD TO PB	M3	Under an PB entry:	BLOCK MODE		FIRST RING
ADD TO BL	M4		W/O NUM		
DELETE	M5	ADD			
DELETE ALL	M6	VIEW			
	M7	EDIT			
	M8	DELETE			
	M9	DELETE ALL			
		ADD VIP			
		ADD TO SD			
		STATUS			



HS SETTINGS	SET SOS	REMINDER	TLK DIGITS	SET DEVICES	DEVICES	ANS. SYS.
RING SETUP	SOS NUMBER	ALARM 1 to 10	ON / OFF	CHECK SIGNAL	DOORBELL	PLAYBACK
TONE SETUP					ALERTER	DEL OLD
TEXT LANG		ON/OFF			Setting available for the 2 devices	MEMO
DATE & TIME	SOS MSG	If ON		DOORBELL		TAM ON/OFF
REGISTER		You can program your alarm		Under a selected doorbell		SET TAM
DEFAULT	SOS LANG			CHIME	STATUS	TAM LANG;
		ONCE		RECORD?	LOG	CALLSCREEN
		DAILY		DBELL DVRT	RENAME	TAM MSG
		MON-FRI				ANS. DELAY
		SAT-SUN				REC. TIME
						REMOTE ACC.
						CHANGE PIN
						MSG ALERT

c. Text and Digit Entry Table

The following tables show you where each letter and punctuation character can be found. This will be helpful when storing a name in the phonebook or renaming your handset

In editing mode, a cursor is displayed to indicate the current text entry position. It is positioned at the right of the last character entered.

Writing Tips:

- Once a character is selected, the cursor will move to the next position after a short pause.
- You can move the cursor within the text by ▲/▼ to amend the text entry.
- Press **RIGHT SOFTKEY** (↩) on the handset to delete the last character.
- Press and hold **RIGHT SOFTKEY** (↩) on the handset to delete the entire text string.

3.5.1 English Character Set



Key	Alphanumeric Editing (For phonebook name editing and renaming handset)											Number Editing (For phone number editing, date)
	Press	1x	2x	3x	4x	5x	6x	7x	8x	9x	10x	
1	1	.	-	'	()	*	#	&	/	,	1
2	a	b	c	A	B	C	2					2
3	d	e	f	D	E	F	3					3
4	g	h	i	G	H	I	4					4
5	j	k	l	J	K	L	5					5
6	m	n	o	M	N	O	6					6
7	p	q	r	s	P	Q	R	S	7			7
8	t	u	v	T	U	V	8					8
9	w	x	y	z	W	X	Y	Z	9			9
0		0										0, P (Pause)
*												*
#												#

4. USE YOUR PHONE

4.1 Make an External Call

4.1.1 Preparatory (Pre) Dialing

Using a handset:

Enter the phone number and press  to dial the number. Press **RIGHT SOFTKEY**  to clear the entry.



4.1.2 Direct Dialing

Using a handset:

Press  to open the line, and then dial the phone number.

4.1.3 Call from the Phonebook

Using a handset:




1. Press  ▼ to access the phonebook list and press ▲ ▼ to select the desired phonebook entry.
2. Press  to dial the selected entry. Press it again to turn on the speakerphone.

4.1.4 Call from the Call List

Using a handset:




1. Press  to access the call list.

OR

1. Press **LEFT SOFTKEY**  to enter the main menu.
2. Press **LEFT SOFTKEY**  to enter **CALL LOG**
3. Press ▲ ▼ to select the desired call list entry.
4. Press  to dial the selected call list entry. Press it again to turn on the speakerphone.

4.1.5 Call from the Redial List

Using a handset:

1. Press  to access the redial list.
2. Press  to select the desired redial number.
3. Press  to dial the selected redial number. Press it again to turn on the speakerphone.


4.1.6 Call Timer

Your handset automatically times the duration of each call. The call timer will display a few seconds after the call has ended. It is shown in hours, minutes and seconds format (HH:MM: SS).

4.2 Answer a Call

Using a handset:

If the handset is not in the charging cradle or the base station:

When the phone rings, press  to answer a call. Press it again to turn on the speakerphone.



If the handset is in the charging cradle or the base station: When the phone rings, pick up the handset to answer a call.

4.3 BOOSTER Function


The BOOSTER function allows you to amplify the handset earpiece volume to compensate for the person using the phone's limited hearing.

Using a handset:

To turn on the BOOSTER function:

- Press  SOS at any time during a call. "BOOST ON" displays on the handset screen and the red LED on the top turns on.
- When the BOOSTER function is activated, press  to increase or decrease the earpiece volume.
- The handset top indicator turns on as a visual reminder that the boost function is on

To turn off the BOOSTER function and return the earpiece volume back to normal:

- Press  SOS again and the handset top indicator will turn off.

NOTE:

The audio boost feature will be turned off automatically when the call is ended
To activate the booster at each call: see chapter 9.1.5

4.4 End a Call

Using a handset:



During a call, press  to end the call. **OR**

Put the cordless handset in the charging cradle to end the call.

4.5 Adjust Earpiece and Speakerphone Volume

There are 6 levels (VOLUME 1 to VOLUME 6) to choose from for each of earpiece and speakerphone volume.



Using a handset: During a call:

Press   to select volume 1-6. The current setting is shown. When you end the call, the setting will remain at the last selected level.

4.6 Mute a Call

With the call muted, you can talk to someone nearby without letting the caller hear you during a call.

Using a handset: During a call:




Press **RIGHT SOFTKEY**  to mute the microphone and "MUTE ON" will be displayed on the handset screen. Your caller cannot hear you. Press **RIGHT SOFTKEY**  again to resume the microphone.

4.7 Redial the Last Number

You can redial up to 10 of the last numbers called on the cordless. If you have stored a name in the phonebook to match with the number, the name will be displayed instead. The most recently dialed number will be displayed at the top of the redial list.

4.7.1 Redial a Number from the Redial List

Using a handset:





1. In idle mode, press  to access the redial list.
2. Press  to browse the redial list.
3. Press  to dial the selected redial number.

NOTE:

If there is no number in the redial list, the display will show "EMPTY".




4.7.2 Store a Redial Number into the Phonebook

Using a handset:

1. Follow Steps 1 and 2 in section 4.7.1.
2. Press **LEFT SOFTKEY**  to select **ADD TO PB**.
3. Press **LEFT SOFTKEY**  And check the phone number.
4. Press **LEFT SOFTKEY**  to enter the name
5. Press **LEFT SOFTKEY**  to save




 
4.7.3 Delete a Redial Number

Using a handset:

1. Follow Steps 1 and 2 in section 4.7.1.
2. Press **LEFT SOFTKEY**  and  to select **DELETE**.
Press **LEFT SOFTKEY**  to confirm

4.7.4 Delete the Entire Redial List

Using a handset:



1. Follow Steps 1 and 2 in section 4.7.1.
2. Press **LEFT SOFTKEY**  and  to select **DELETE ALL**.
3. Press **LEFT SOFTKEY**  to confirm.
Press **LEFT SOFTKEY**  to reconfirm

4.8 Find the Handset

This feature helps you find the misplaced handset(s).

You can locate the handset by operation on the base station as below.

- In idle mode, press /HANDSETLOCATOR.

All the handsets registered to the base will produce the paging tone, and "PAGING" will flash on the screen. You can stop the paging by pressing  /  /

RIGHT SOFTKEY  on any handset or /HANDSET LOCATOR on the base to stop paging.

NOTE:



If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

4.9 Make an Internal Call

This feature allows you to make internal calls, transfer external calls and make conference calls. If the called handset is not answered within 60 seconds, it will stop ringing and the calling one will return to standby mode. Please note that additional handsets need to be registered to the base unit for this feature to be used.


4.9.1 Intercom

Using a handset:

1. In idle mode, press **RIGHT SOFTKEY**  and the numbers of the registered handsets will display except the calling handset.
2. Select the desired handset number that you want to intercom with.
3. The called handset rings. Press  on the called handset to establish the internal call.

4.9.2 Call All Handsets








Using a handset:

1. In idle mode, press **RIGHT SOFTKEY**  and the numbers of the registered handsets will display except the calling handset.
2. Select **ALL** to ring to all registered handsets.

4.9.3 Transfer an External Call

Using a handset:


During an external call:

1. Press **LEFT SOFTKEY**  and   to select **INTERCOM**.
2. Press **LEFT SOFTKEY**  to select the desired handset you want to intercom with.
3. Press **LEFT SOFTKEY**  and the external call is put on hold automatically and the called handset rings.
4. Press  on the called handset to establish an internal call.
5. Press  on the calling handset or put the calling handset on the charging cradle to end the current call with the external party.
6. The external call is transferred automatically to the called handset.

4.9.4 Make a 3-way Conference Call

The conference call feature allows one external call to be shared with two additional cordless handsets. The three parties can share the conversation. No network subscription is required.

Using a handset: During the external call

1. Follow Steps 1 to 4 in section 4.9.3.
2. Press and hold  on the calling handset to establish the conference call.

NOTE:

Any party (corded base or cordless handset) hangs up during a conference call will leave the other party still in connection with the external call








5 PHONEBOOK

Your phone can store up to 50 phonebook entries in the cordless handset and the telephone base with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. Phonebook entries are stored alphabetically by name.

5.1 Add a New Phonebook Entry

Using a handset:


In idle:

1. Press **LEFT SOFTKEY**  and **▲ ▼** to select **PHONEBOOK** main menu item and then press **LEFT SOFTKEY**  to select **ALL**.
2. Press **LEFT SOFTKEY**  to access the phonebook list.
3. Press **LEFT SOFTKEY**  to select **ADD**.
4. Press **LEFT SOFTKEY**  and enter the number.
5. Press **LEFT SOFTKEY**  and enter the name.
6. Press **LEFT SOFTKEY**  to store the phonebook entry.

5.2 Search for a Phonebook Entry

Using a handset:




In idle:

1. Enter the phonebook list by press the key  **▼**.
2. Enter the first character of your desired name of the phonebook entries by pressing the appropriate numeric keypad button multiple times to select the letter of the alphabet.

5.3 View a Phonebook Entry


 






Using a handset:

In idle:

1. Repeat the steps 1 to 2 in section 5.1 or press directly  **▼**.
2. Press **▲ ▼** to select the desired phonebook entry.
3. Press **LEFT SOFTKEY**  and **▲ ▼** to select **VIEW**.
Press **LEFT SOFTKEY**  and **▲ ▼** to see the number of the selected phonebook entry

5.4 Edit a Phonebook Entry


 



Using a handset: In
idle:

1. Repeat the steps 1 to 2 in section 5.1 or press directly ▼.
2. Press ▼ to select the desired phonebook entry.
3. Press **LEFT SOFTKEY**  and ▼ to select **EDIT**.
4. Press **LEFT SOFTKEY**  and the current contents of the selected phonebook entry displays.
5. Edit the number and press **LEFT SOFTKEY** .
6. Edit the name and press **LEFT SOFTKEY** .
7. Press **LEFT SOFTKEY**  to confirm the setting.

Note: Use the **RIGHT SOFTKEY**  to delete a character or a digit.





5.5 Delete a Phonebook Entry

Using a handset: In
idle:

1. Repeat the steps 1 to 2 in section 5.1 or press directly ▼.
2. Press ▼ to select the desired phonebook entry.
3. Press **LEFT SOFTKEY**  and ▼ to select **DELETE**.
4. Press **LEFT SOFTKEY**  to confirm.

5.6 Delete the Entire Private Phonebook






Using a handset: In
idle:

1. Repeat the steps 1 to 2 in section 5.1 or press directly ▼.
2. Press **LEFT SOFTKEY**  and ▼ to select **DELETE ALL**.
3. Press **LEFT SOFTKEY**  to confirm

5.7 Check the Phonebook Usage

You can check how many phonebook entries have been occupied in your phone and how many phonebook entries are available for you to store in the phonebook.

Using a handset:








1. Repeat the steps 1 to 2 in section 5.1 or press directly .
2. Press **LEFT SOFTKEY**  and **▲ ▼** to select **STATUS**.
3. Press **LEFT SOFTKEY** , the display shows "XX/50" (XX refer to the number of phonebook entries).
4. Press **RIGHT SOFTKEY**  or  to EXIT.

5.8 Set the Speed Dial Numbers from 1 to 9







After setting the speed dial numbers, you can dial to the pre-set numbers by pressing and holding the respective digit keys (1-9 on the handset) in idle mode.

5.8.1 Add or Edit the Speed Dial Number

Using a handset:




1. Press **LEFT SOFTKEY**  and **▲ ▼** to select **PHONEBOOK**.
2. Press **LEFT SOFTKEY**  and **▲ ▼** to select **SPEED DIAL**.
3. Press **LEFT SOFTKEY**  and **▲ ▼** to select from **KEY 1** to **KEY 9**.
4. Press **LEFT SOFTKEY**  and select **ADD**.
5. Press **LEFT SOFTKEY**  and enter the **NUMBER**.
6. Press **LEFT SOFTKEY**  and enter the **NAME**.
7. Press **LEFT SOFTKEY**  to save

Or if there is already a number stored in the selected key:

4. Press **LEFT SOFTKEY**  and **▲ ▼** to select **EDIT**.
5. Press **LEFT SOFTKEY**  and modify the **NUMBER** with the **RIGHT SOFTKEY** .
6. Press **LEFT SOFTKEY**  and modify the **NAME** with the **RIGHT SOFTKEY** .
7. Press **LEFT SOFTKEY**  to confirm.

5.8.2 Delete one or all Speed Dial Number

Using a handset:

1. Repeat the steps 1 to 3 in section 5.8.1.
2. Press **LEFT SOFTKEY**  and **▲ ▼** to select **DELETE** or **DELETE ALL**.
3. Press **LEFT SOFTKEY**  to valid.
4. Press **LEFT SOFTKEY**  to confirm

5.9 VIP Phonebook

Once you have saved your VIP numbers, you can search them in the VIP phonebook to find them easier.




 

5.9.1 Set the VIP number

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲▼** to select **PHONEBOOK**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **ALL**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select the phone number.
4. Press **LEFT SOFTKEY**  and **▲▼** to select **ADD VIP**.
5. Press **LEFT SOFTKEY**  to save.




 


5.9.2 View the VIP list

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲▼** to select **PHONEBOOK**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **VIP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select the phone number.
4. Press **LEFT SOFTKEY**  and **▲▼** to select **VIEW**.
5. Press **LEFT SOFTKEY**  to access at the information



 



5.9.3 Delete or delete all the VIP number

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲▼** to select **PHONEBOOK**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **VIP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select the phone number.
4. Press **LEFT SOFTKEY**  and **▲▼** to select **Delete or delete all**.
5. Press **LEFT SOFTKEY**  to valid
6. Press **LEFT SOFTKEY**  to confirm

5.9.4 Status of the VIP

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲▼** to select **PHONEBOOK**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **VIP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **STATUS**.
4. Press **LEFT SOFTKEY**  to confirm The display shows "XX/50" (XX refer to the number of VIP entries)
5. Press **RIGHT SOFTKEY**  or  to EXIT.

6 CALLER DISPLAY (NETWORK DEPENDENT)

This feature is available if you have subscribed the Caller Line Identification service with your telephone/network service provider. Your phone can store up to 20 received calls on the cordless handset with date/time information in the call list. The number will be shown on the LCD when the phone is ringing. If the number matches with one of the entries in your private phonebook, the caller's name stored in the private phonebook will be displayed with the number. The phone will ring with the melody associated with that phonebook entry.

If the caller's caller display function is disabled, "UNAVAIL" will be displayed.

If the call is an international call or with unknown number, "OUT OF AREA" will be displayed.

In standby, if three unanswered calls are received, "3 NEW CALLS" will be displayed. (as an example)





6.1 View the Call List

All unanswered calls are saved in the calls log with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. The unanswered call which has not been read is marked with ★ icon.

Using a handset:





1. Press **LEFT SOFTKEY**  and **▲▼** to select **CALL LOG**.
2. Press **LEFT SOFTKEY**  and **▲▼** to see the desired call list entry.

6.2 More information on the call log

1. Follow Section 6.1 to access the call list.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **DETAILS**
You will have the name and the date & time of the call you missed.
3. Press **LEFT SOFTKEY**  to see the phone number
4. Press **RIGHT SOFTKEY**  or  to EXIT

6.3 Store a Call List Number into the Phonebook





Using a handset:

1. Follow Section 6.1 to access the call list.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **ADD TO PB**.
3. Press **LEFT SOFTKEY**  and the selected call list number will be displayed.
4. Press **LEFT SOFTKEY**  and enter the Name.
5. Press **LEFT SOFTKEY**  to confirm.

6.4 Store a Call List Number into the Black list




Using a handset:

If you want to block a phone number, do the following to place the number in the Black List

1. Follow Section 6.1 to access the call list.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **ADD TO BL.**
3. Press **LEFT SOFTKEY**  and the selected call list number will be displayed.
4. Press **LEFT SOFTKEY**  and enter the Name.
5. Press **LEFT SOFTKEY**  to confirm

 


6.5 Delete an Entry in the Call List

Using a handset:

1. Follow Section 6.1 to access the call list.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **DELETE.**
3. Press **LEFT SOFTKEY**  to valid.
4. Press **LEFT SOFTKEY**  to confirm.

6.6 Delete the Entire Call List







Using a handset:

1. Follow Section 6.1 to access the call list.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **DELETE ALL.**
3. Press **LEFT SOFTKEY**  to valid.
4. Press **LEFT SOFTKEY**  to confirm

7. FUNCTION CALL BLOCK

If you want to block a phone number, do the following to place the number in the Black List

In idle mode:

1. Press **LEFT SOFTKEY**  and **▲▼** to select **CALL BLOCK.**
2. Press **LEFT SOFTKEY**  and **▲▼** to select **BLACKLIST.**
3. Press **LEFT SOFTKEY**  and **▲▼** to select **ADD.**
4. Press **LEFT SOFTKEY**  and enter the Phone number.
5. Press **LEFT SOFTKEY**  and enter the Name.
6. Press **LEFT SOFTKEY**  to confirm
- 7.

8. PICTURE BIG BUTTON MEMORIES

This function is not available on the Amplidect 595ULE





9. PHONE SETTINGS

Your phone comes with a selection of settings that you can change to personalize your phone the way you want it to work.

9.1 Handset Settings

9.1.1 Set the Ringer Melody for Internal Calls

You can set special melody to personalize your internal ringer. A total of 10 melodies are provided for your selection.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **RING SETUP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **INT RING**.
4. Press **LEFT SOFTKEY**  and **▲▼** to select the desired ringer melody for setting ringer melody for internal calls.





NOTE:

The respective ringer melody will be played while you are browsing the melody list.

5. Press **LEFT SOFTKEY** to confirm.

9.1.2 Set the Ringer Melody for External Calls

You can set special melody to personalize your external ringer. A total of 10 melodies are provided for your selection.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **RING SETUP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **EXT RING**.
4. Press **LEFT SOFTKEY**  and **▲▼** to select the desired ringer melody for setting ringer melody for external calls.

NOTE:

The respective ringer melody will be played while you are browsing the melody list.



5. Press **LEFT SOFTKEY**  to confirm.

9.1.3 Set the Ringer Volume

You can set the ringer volume level. A total of 6 ringer volume levels including VOLUME OFF are provided for your selection.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **RING SETUP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **RING VOLUME**.
4. Press **LEFT SOFTKEY**  and **▲▼** to select the desired ringer volume.

NOTE:

- The respective ringer volume will be played during your selection.
 - If OFF is selected,  will be displayed on the handset screen.
5. Press **LEFT SOFTKEY**  to confirm.



9.1.4 Set Alert Tones

A single beep is emitted when you press a key. You can turn on or off the key tone/beep. You can also turn on the alert tones when low battery and/or out of range are detected. Low battery tone will be emitted while you are talking with the phone to alert you that you need to charge up the handset battery.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **tone SETUP**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **KEY TONE / BATT TONE / RANGE TONE**.
4. Press **LEFT SOFTKEY**  and **▲▼** to select **ON** or **OFF**.
5. Press **LEFT SOFTKEY**  to confirm.

9.1.5 Activate the boost automatically

You can activate the boost at each call

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **AUTO BOOST**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **ON** or **OFF**.
4. Press **LEFT SOFTKEY**  to confirm.

9.1.6 Set the Handset Language

You can choose the language to be displayed on the handset screen from a total of 7 languages (English, Français, Deutsch, Nederlands, Italiano, Español, Portugues).

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **TEXT LANG**.






3. Press **LEFT SOFTKEY**  and **▲▼** to select your desired language.
4. Press **LEFT SOFTKEY**  to confirm.

9.1.7 Clock Settings




You will need to set the correct date and time so that you know when you received answering machine messages or call list entries.

Using the handset:





9.1.7.1 Set the Date Format

1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTING**
2. Press **LEFT SOFTKEY**  and **▲▼** to select **DATE & TIME**.
3. Press **LEFT SOFTKEY**  to show **DATE FORM**.
4. Press **LEFT SOFTKEY**  and **▲▼** to select your desired date format (DD--MM--YY or MM--DD--YY).
5. Press **LEFT SOFTKEY**  to confirm.

9.1.7.2 Set the Time Format

1. Follow **Set the Date Format** to arrive to **DATE & TIME**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **TIME FORMAT**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select your desired time format (12 HR or 24 HR).
4. Press **LEFT SOFTKEY**  to confirm.

9.1.7.3 Set the Date & Time

1. Follow **Set the Date Format** to arrive to **DATE & TIME**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **SET DATE**.
3. Press **LEFT SOFTKEY**  and enter the date information. The date entered will be in the format you set in section 9.1.7.1.
4. Press **LEFT SOFTKEY**  and enter the time information. The time entered will be in the format you set in section 9.1.7.2.
5. Press **LEFT SOFTKEY**  to confirm.

NOTE:

If time has been set before, the current time will display, otherwise, "HH--MM" will be displayed.




If date has been set before, the current date will display, otherwise, "DD--MM--YY" will be displayed.

9.1.8 Registration

Note: Handset and base station are pre-registered.
Up to five handsets can be registered to a single base station.

1. On **Base**: press and hold 5 seconds  **/HANDSET LOCATOR** on the base until you hear a beep, the base is now in registration mode.

On The Unregistered Handset:

2. Press **MENU/OK**  Use **▼▲** to select **HS SETTING**
3. Press **MENU/OK**  and use **▼▲** to select **REGISTER**,
4. Press **MENU/OK**  and **REGISTERING** is displayed.

After a short delay, if the registration is successful, there will be a confirmation beep, and the handset display will go back to idle mode with the new handset number shown. The base will also go back to idle mode.

9.1.9 Reset Your Phone

You can reset your phone to the default settings. After reset, all your personal settings and call list entries will be deleted, but your phonebook list remains unchanged.

Using a handset:





1. Press **LEFT SOFTKEY**  and **▲▼** to select **HS SETTINGS**
2. Press **LEFT SOFTKEY**  and **▲▼** to select **DEFAULT**.
3. Press **LEFT SOFTKEY**  to confirm

9.2 Base Settings

Using the handset:




9.2.1 Set the Ringer Melody

You can set a special melody to personalize your base external ringer. A total of 5 melodies are provided for your selection.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **BS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **BS RINGER**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select the desired ringer melody.
4. Press **LEFT SOFTKEY**  to confirm.





9.2.2 Set the Ringer Volume

You can adjust the volume level of the ringer for internal call (INT RING) and external call (EXT RING) separately, with settings from 1 (the quietest) to 5 (loudest), or set it to VOLUME OFF.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **BS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **RING VOL.**
3. Press **LEFT SOFTKEY**  and **▲▼** to select the desired volume level list.
4. Press **MENU/OK** to confirm.

9.2.3 Set the Flash Time

The default flash time is best suitable for your country and network operator. It is unlikely that you should need to change this setting unless advised to do so.

1. Press **LEFT SOFTKEY**  and **▲▼** to select **BS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **FLASH TIME**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select your desired flash time (**SHORT** 100ms, **MEDIUM** 300ms, **LONG** 600ms).
4. Press **LEFT SOFTKEY**  to confirm.

9.2.4 Remove the first ring

We can remove the first ring to remove the de-notification or notification from your call waiting.








1. Press **LEFT SOFTKEY**  and **▲▼** to select **BS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **FIRST RING**.
3. Press **LEFT SOFTKEY**  and select **ON** or **OFF**.
4. Press **LEFT SOFTKEY**  to valid

10 SOS Emergency calls

10.1 SOS Settings

You need to set the SOS numbers before you can make SOS emergency calls using the handset.

Using the handset:

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET SOS**.
2. Press **LEFT SOFTKEY**  to show **SOS NUMBER**.
3. Press **LEFT SOFTKEY**  and **▲/▼** to select the SOS number to edit (**SOS 1**, **SOS 2**, **SOS 3** or **SOS 4**).
4. Press **LEFT SOFTKEY** and select **ADD** or **EDIT** to modify the number stored already.
5. Press **LEFT SOFTKEY**  and enter the phone number
6. Press **LEFT SOFTKEY**  and enter the Name
7. Press **LEFT SOFTKEY**  to confirm or **RIGHT SOFTKEY**  to delete.




10.2 Make SOS Emergency Calls

Using the handset:

Press and hold SOS key on the handset to initiate the emergency calling sequence from the **SOS 1** number to **SOS 4** number. A call will be first dialed to the **SOS 1** number. If the **SOS 1** number does not answer in 60 seconds, the call will be made to the **SOS 2** number, and so on.

Note: The other party receiving SOS message must press any number on their phone to open the SOS call. Thereafter by pressing any number on their phone every 2minutes will keep the emergency call open otherwise the phone drops the call 10 seconds thereafter.




10.3 Select the SOS language talking

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET SOS**.
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SOS LANG**.
3. Select one of the 4 languages (English, French, Deutsch and Nederland) and Press **LEFT SOFTKEY**  to save.

10.4 Record SOS Message

You can record your customized SOS message to be played when you dial out an SOS emergency call.

Using the handset:

1. Press **LEFT SOFTKEY**  and **▲▼** to select **SET SOS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **SOS MSG**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **RECORD**.
4. Press **LEFT SOFTKEY** to start SOS message recording after the beep and "RECORDING" will be displayed.
5. Press **LEFT SOFTKEY**  to save your SOS message.

10.5 Play SOS Message

Using the handset:



1. Press **LEFT SOFTKEY**  and **▲▼** to select **SOS SETTINGS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **SOS MSG**.
3. Press **LEFT SOFTKEY**  to show **PLAY**.
4. Press **LEFT SOFTKEY**  to start SOS message playback.
5. Press **RIGHT SOFTKEY**  to stop SOS message playback.

10.6 Delete the SOS Message



Using the handset:

1. Press **LEFT SOFTKEY**  and **▲▼** to select **SET SOS**.
2. Press **LEFT SOFTKEY**  and **▲▼** to select **SOS MSG**.
3. Press **LEFT SOFTKEY**  and **▲▼** to select **DELETE**.
4. Press **LEFT SOFTKEY** to valid, **RESET TO DEFAULT** is displayed.









 


11. Alarm Settings

You can use this phone to set an alarm. When an alarm is set, the  displays on the screen. When the alarm time is reached, the  and "ALARM ON" flash on the screen ringing with the alarm melody for a duration of 45 seconds. You can press any key to cancel the alarm.




NOTES:

- The alarm volume level is the same as the settings of the handset ringer volume. If the handset ringer is set to **OFF**, the alarm still sounds at **VOLUME 1** level.
- During an external call or an internal call, if an alarm is set and when the alarm time is reached, the  and "ALARM ON" will still flash. An alarm tone will be emitted from the earpiece to notify user the alarm time is reached. Once user press any key or press and hold  to cancel the alarm, It will revert to the call duration screen.
- During paging or ringing, the alarm will not sound when the alarm time is reached.





11.1 Turn on/off the Alarm

- Press **LEFT SOFTKEY**  and  to select **REMINDER**.
- Press **LEFT SOFTKEY**  and  to select the number of your ALARM
- Press **LEFT SOFTKEY**  and select **ON/OFF**.
- Press **LEFT SOFTKEY**  and  to select **ON**
- Press **LEFT SOFTKEY**  and enter the hour and minute.
- Press **LEFT SOFTKEY**  and choose the frequency (**Once, Daily, MON-FRI, SAT-SUN**)
- Press **LEFT SOFTKEY**  and  is displayed.

11.2 Rename the Alarm name





- Follow Steps 1 to 2 in section 11.1.
- Press **LEFT SOFTKEY**  and choose **RENAME**.
- Press **RIGHT SOFTKEY**  to delete a character and enter the new name
- Press **LEFT SOFTKEY**  to confirm.

11.3 Set the Alarm Melody

- Follow Steps 1 to 2 in section 11.1.
- Press **LEFT SOFTKEY**  and choose melody.
- Press **LEFT SOFTKEY**  and  to choose your melody
- Press **LEFT SOFTKEY**  to confirm.




11.4 Voice memo for the Alarm

If you record a voice memo, the handset will play your message recorded instead of the alarm melody

1. Follow Steps 1 to 2 in section 11.1.
2. Press **LEFT SOFTKEY**  and select **VOICE MEMO**.
3. Press **LEFT SOFTKEY**  and select **RECORD**
4. Press **LEFT SOFTKEY**  and leave your message after the beep.
5. Press **LEFT SOFTKEY**  to stop the recording




11.5 Play a Voice memo

If you have recorded a voice memo, you can check your message in choose play

1. Follow Steps 1 to 2 in section 11.1.
2. Press **LEFT SOFTKEY**  and select **VOICE MEMO**.
3. Press **LEFT SOFTKEY**  and select **PLAY**
4. Press **LEFT SOFTKEY**  to confirm.

11.6 Delete a Voice memo




If you have recorded a voice memo, you can delete your message in choose play

1. Follow Steps 1 to 2 in section 11.1.
2. Press **LEFT SOFTKEY**  and select **VOICE MEMO**.
3. Press **LEFT SOFTKEY**  and select **DELETE**
4. Press **LEFT SOFTKEY**  to confirm.

12 TALKING function

The AD595 is capable of speaking the numbers that you press on the numeric keypad (Talk Keypad).

Using the handset:





1. Press **LEFT SOFTKEY**  and **▲/▼** to select **TLK DIGITS**.
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **ON/OFF**.
3. Press **LEFT SOFTKEY**  to Valid.

13 ANSWERING MACHINE

Your telephone base includes a telephone answering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 30 minutes. As well as recording incoming messages, you can record memos for other users of your phone.

13.1 Switching Answering Machine On/Off

Using a handset:

1. Press **LEFT SOFTKEY**  and **▼/▲** to select **ANS.SYS**.
2. Press **LEFT SOFTKEY**  and **▼/▲** to select **TAM ON / OFF**.
3. Press **LEFT SOFTKEY**  and **▼/▲** to select **ON** or **OFF**.
4. Press **LEFT SOFTKEY**  to confirm.


Note:

You can press the key **ANSWER ON** of the base to activate the answering machine.



 
13.2 Play Messages on TAM

If you have new messages, the handset display will show e.g. 2 NEW MESSAGE, which means you have 2 new messages. New messages are played first, and then are saved as old messages, until they are deleted. Old messages are played again after all new messages are played completely.


Using the base

Press the key  to start the playback of the message

Using the handset:

- 1) Press **LEFT SOFTKEY**  and **▼/▲** to select **ANS. SYS**.
- 2) Press **LEFT SOFTKEY**  to show **PLAYBACK**.
- 3) Press **LEFT SOFTKEY**  again to start message playback and the screen displays the date and hour of the message received.
- 4) During message playback, press **▼/▲** to adjust the message playback volume respectively.

NOTE: After new message is played, the new message will be saved as an old message automatically unless it is deleted.

- 5) Press **LEFT SOFTKEY**  and **▼/▲** to select **STOP, FORWARD, PREVIOUS** or **DELETE** to perform the following functions during message playback.

STOP: Stop the current message playback and return to the **ANS. MACHINE** menu.

FORWARD: Skip to play the next message. The date and hour information of the next message will display if there is next message.

PREVIOUS: Skip to repeat playing the current message from the beginning. The date and hour information of the current message will display.

DELETE: Delete the current message and the next message will be played.





- 6) Press **LEFT SOFTKEY**  to confirm the setting.

NOTE:

Alternatively, you can use the following shortcut keys to control different operation during message playback.

- Press **5** to stop message playback
- Press **4** to skip to repeat playing the current message from the beginning.
- Press **4** twice to skip backward to the previous message.
- Press **6** to skip to play next message.
- Press **2** to delete the current message playback.
- Press **8** to listen the message slowly
- Press **▲▼** to adjust the playback volume.

13.3 Delete all Messages on TAM**Using a handset:**

1. Press **LEFT SOFTKEY**  and **▲▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲▼** to select **DEL OLD.**
3. Press **LEFT SOFTKEY** .
4. Press **LEFT SOFTKEY**  again to confirm delete all old messages.

NOTE:

You cannot delete new messages, so you will need to play them before trying to delete.


13.4 Record Memos on TAM

You can record your memo message for another user. When you record a memo, the message counter will increase by one and the message can be played in the same way as answering machine messages. Memo recording can still function even when the answering machine is turned off.

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲▼** to select **MEMO.**
3. Press **LEFT SOFTKEY**  to start memo recording after the beep and "RECORDING" will be displayed.
4. Press **LEFT SOFTKEY**  to stop memo recording and save the memo.

OR

Press **RIGHT SOFTKEY**  to stop memo recording without saving and go back to TAM menu.








13.5 TAM SETTING

13.5.1 Record your outgoing Message (OGM)

You can record your own OGM. When you record your own OGM, it will be used when the answering machine answers the call.





 

If your personalized OGM is deleted, the pre-set OGM will be restored automatically.

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and **▲/▼** to select **TAM MSG.**
4. Press **LEFT SOFTKEY**  and **▲/▼** to select **RECORD.**
5. Press **LEFT SOFTKEY**  to start recording your personalized OGM after the beep and "RECORDING" will be displayed on the screen.
6. Press **LEFT SOFTKEY**  to stop and save your personalized OGM. Your newly saved OGM will play automatically. Alternatively, press **RIGHT SOFTKEY**  to return to previous screen without saving the personalized OGM.

13.5.2 Playback the Outgoing Message (OGM)

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and **▲/▼** to select **TAM MSG.**
4. Press **LEFT SOFTKEY**  and **▲/▼** to select **PLAY.**
5. Press **LEFT SOFTKEY**  to play your personalized OGM (if you have recorded a personalized OGM before) and "PLAYING ANNC" will be displayed on the screen.
6. Press **LEFT SOFTKEY**  to stop the OGM playback and return to the previous menu.

NOTE:

If a personalized OGM is not recorded before, the pre-set OGM will be played.

13.5.3 Delete a Personalized OGM (SET OGM to DEFAULT)

Using a handset:

1. Repeat Steps 1 to 3 in the section 12.5.2.
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **DELETE**.
3. Press **LEFT SOFTKEY**  and **RESET TO DEFAULT** is displayed.

NOTE:






Your personalized OGM and return to previous menu and the pre-set OGM is restored automatically.

13.5.4 Set the Answer Delay

You can set the number of rings before the answering machine answers and starts playing your OGM. You can set the answering machine to answer after two to ten rings or TIME SAVER.

The TIME SAVER function answers calls after 6 ring signals, until the first new message has been registered then the answering machine switches to answering after approximately 2 rings. This is useful when using remote access; if you call up the answering machine and there is no reply after four rings that means there are no messages recorded and you can hang up before you are charged for the call.






Using a handset:

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. DELAY**
4. Press **LEFT SOFTKEY**  and **▲/▼** to select your desired answer delay.
(Available options: **2 RINGS, 4 RINGS, 6 RINGS, 8 RINGS, 10 rings or TOLL SAVE**)
5. Press **LEFT SOFTKEY**  to confirm.

13.5.5 Set the Recording Time of Incoming Message

You can set the maximum length of the recording time of the incoming messages.

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and **▲/▼** to select **RECORD TIME.**
4. Press **LEFT SOFTKEY**  and **▲/▼** to select your desired recording time
(Available options: **60S, 120S or 180S**).
5. Press **LEFT SOFTKEY**  to confirm.

13.5.6 Set the talking TAM Language

You can choose the voice prompt language of the answering machine from a total of 4 languages(English, Deutsch, Français and Nederlands).

1. Press **MENU/OK** and ▲/▼ to select **ANS. SYS.**
2. Press **MENU/OK** and ▲/▼ to select **SET TAM.**
3. Press **MENU/OK** and ▲/▼ to select **TAM LANG.**
4. Press **MENU/OK** and ▲/▼ to select the desired voice prompt language for the answering machine and SOS message.
5. Press **MENU/OK** to confirm

13.5.7 Turn On or Off the Base Screening

You can select to turn on or off the call screening on base. When the answering machine is set to ON and when there is an incoming message, the base will start call screening automatically after the preset numbers of rings of answer delay.

Using a handset:

1. Press **LEFT SOFTKEY**  and ▲/▼ to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and ▲/▼ to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and ▲/▼ to select **CALL SCREEN.**
4. Press **LEFT SOFTKEY**  and ▲/▼ to select **ON or OFF.**
5. Press **LEFT SOFTKEY**  to confirm.

13.5.8 Activate Remote Access

Your phone lets you check your messages, or otherwise operate your answering machine, by calling the answering machine when you are away from home by entering a 4-digit remote access PIN on a tone-dialing phone. Use the 4-digit remote access PIN code to prevent other people from unauthorized access of your answering machine.






13.5.8.1 Change the 4-Digit Remote Access PIN

Using a handset:

1. Press **LEFT SOFTKEY**  and ▲/▼ to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and ▲/▼ to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and ▲/▼ to select **CHANGE PIN.**
4. Press **LEFT SOFTKEY**  to enter the new 4-digit PIN.
5. Press **LEFT SOFTKEY**  to valid

13.5.8.2 Activate or Deactivate the Remote access






Using a handset:

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and **▲/▼** to select **REMOTE ACC.**
4. Press **LEFT SOFTKEY**  and **▲/▼** to select **ON or OFF** to turn on or off the remote access respectively.
5. Press **LEFT SOFTKEY**  to confirm.

13.5.8.3 MSG ALERT function

Set this function to make the TAM beep every 10 seconds to remind you that there is a new message to listen to.

Using a handset:

1. Press **LEFT SOFTKEY**  and **▲/▼** to select **ANS. SYS.**
2. Press **LEFT SOFTKEY**  and **▲/▼** to select **SET TAM.**
3. Press **LEFT SOFTKEY**  and **▲/▼** to select **MSG ALERT.**
4. Press **LEFT SOFTKEY**  and **▲/▼** to select **ON or OFF** to turn on or off the message alert function.
5. Press **LEFT SOFTKEY**  to confirm.

13.5.8.4 Remote Operations

If you are away from your home, you can call your answering machine to switch on or off the answering machine and listen to your messages remotely using another tone-dialing phone.

1. Place a call from a tone-dialing phone.
2. When the answering machine answers the call and starts playing OGM, press **X**.
3. Enter the 4-digit Remote Access PIN (default PIN is 0000).
4. Press the following keys to carry out your desired function.

K	Functions	
	While message is not playing	While message is playing
2		Delete the current message playback
4		Repeat playing the current message from the beginning. Press twice to skip backward to the previous message.
5		Stop the current message playback
6		Skip forward to play the next message
7	Turn on the answering machine	
9	Turn off the answering machine	
*	Enter the 4-digit remote access	

NOTE:

- When your answering machine memory is full and the answer mode is in **ANS & RECORD**, the answer mode will change to **ANSWER ONLY** automatically. It will change to **ANS & RECORD** mode automatically after some messages have been deleted.


14. ADDITIONNAL DEVICES

You have the possibility to register up to 4 handsets, 3 doorbells and several alerters on the AD595 ULE. All the devices are already paired in the factory when sold as a pack, therefore you will not need to register this device. If you need to pair another doorbell or alerter, please read the user guide of your device.

2. SET DEVICE

Press **MENU/OK**  and **▲/▼** to select **SET DEVICES**.

2.1 CHECK SIGNAL:

DOORBELL: Press **MENU/OK**  and on the doorbell button to check the quality of the signal.

ALERTER: Press **MENU/OK**  to check the quality of the signal.

2.2 DOORBELL:

This function is to be set:

CHIME: In this function, you can set the doorbell melody and volume when you press the doorbell button.

RECORD?: Set ON to record the conversation with the doorbell when you answer with the handset.

DBELL DVRT :

This function allows you to transfer the doorbell alert to another landline or mobile number if you are not going to be home.

DVRT MODE allows to set the function to be in manual, automatic or OFF.

PRESET NUM: allows you to enter the phone number for the diversion of the call when the doorbell is pressed.

3. DEVICES

In this section, you can check the following:

Press **MENU/OK**  and **▲/▼** to select **DEVICES**.

STATUS: This function will let you know if the device is activated to the base unit or not.

LOG: This function is to display the doorbell actions in a list (date/time etc)

RENAME: This function is to change the name of your device.

15. TROUBLESHOOTING

If you have difficulty with your phone, please try the suggestions listed below.

Problem	Solutions
My telephone does not work at all.	<ul style="list-style-type: none">• Make sure the battery is installed and charged correctly.• For optimum daily performance, return the handset to the telephone base after use.• Make sure the power adapter is securely plugged into an outlet and the wall switch is on.• Make sure the telephone line cord is plugged firmly into the telephone base and the telephone wall jack.• Unplug the electrical power to the telephone base. Wait for approximately 15 seconds, then plug it back in. Allow up to one minute for the handset and telephone base to synchronize.• Remove and re-insert all the batteries. If that still does not work, it might be necessary to purchase new batteries.• Disconnect the telephone base from the telephone wall jack and plug in a working telephone. If the other telephone does not work, the problem is probably in the wiring or the telephone service. Contact your phone service provider.
Low battery shows on screen.	<ul style="list-style-type: none">• Place the handset in the telephone base for recharging.• Remove and re-install the batteries and use it until fully depleted, then recharge the handset in the telephone base.• If the above measures do not solve the problem, replace the batteries.
The batteries do not charge in the handset or the handset batteries do not accept charge.	<ul style="list-style-type: none">• Make sure the handset is placed in the telephone base correctly.• Remove and reinstall the battery, then charge for up to 16 hours.• Purchase a new battery.

There is interference during a telephone conversation. My calls fade out when I am using the handset.

- The handset may be out of range. Move it closer to the telephone base.
- If you subscribe to high-speed Internet service (digital subscriber line - DSL) through your telephone line, you must install a DSL filter between the telephone base and the telephone wall jack. The filter prevents noise and caller ID problems caused by DSL interference. Please contact your DSL service provider for more information about DSL filters.
- Appliances or other cordless telephones plugged into the same circuit as the telephone base can cause interference
- Try moving the appliance or telephone base to another outlet.
- Other electronic products may cause interference to your cordless telephone. Install your telephone as far away as possible from the following electronic devices: wireless routers, radios, radio towers, pager towers, cellular telephones, digital telephones, intercoms, room monitors, televisions, VCRs, personal computers, kitchen appliances, and other cordless telephones.
- If your telephone is plugged in with a modem or a surge protector, plug the telephone (or modem/surge protector) into a different location. If this doesn't solve the problem, re-locate your telephone or modem farther apart from each other, or use a different surge protector.
- The location of your telephone base can impact the performance of your cordless phone. For better reception, install the telephone base in a centralized location within your home or office, away from walls or other obstructions. In many environments, elevating the telephone base improves overall performance.
- Disconnect the telephone base from the telephone wall jack and plug in a corded telephone. If calls are still not clear, the problem is probably in the wiring or telephone service.
- Contact your telephone service provider (charges might apply).
- If the other telephones in your home are having the same problem, the problem is in the wiring or telephone service.

Common cure for electronic equipment.

If the telephone is not responding normally, put the handset in the telephone base. If it does not respond, try the following (in the order listed):

- Disconnect the power to the telephone base.
 - Disconnect the batteries on the handset.
 - Wait a few minutes before connecting power to the telephone base.
 - Re-install the batteries and place the handset in the telephone base.
 - Wait for the handset to synchronize with the telephone base. Allow up to one minute for this to take place.
-

This telephone is not equipped with a grounding function! Therefore some of the functions may be limited when used in PBX systems.

Please contact the technical support of the network provider for further information.

16. TECHNICAL SPECIFICATIONS

Basic Information	
Valid range	Indoor: 50m Outdoor: 300m
Handset Operating Time	Standby time: 100Hours approx. Talk time: 10Hours approx.
RF Parameter	
Frequency	1.88GHz to 1.9GHz
Number of Channels	10
Power Supply	
Base	Input 100-240V 50/60Hz; output 6V; 600mA adapter
Charger	Input 100-240V 50/60Hz; output 6V; 450mA adapter
Handset	3 batteries AAA 1.2V/600mAh rechargeable
Ringer level	
Base	80 dB at 1 meter
Handset	80 dB at 1 meter

17. CARE AND MAINTENANCE INSTRUCTIONS

Take care of your telephone

- a. Your cordless telephone contains sophisticated electronic parts, so you must treat it with care.
- b. Avoid rough treatment.
- c. Place the handset down gently.
- d. Save the original packing materials to protect your telephone if you ever need to ship it.

Avoid water

You can damage your telephone if it gets wet. Do not use the handset in the rain, or handle it with wet hands. Do not install the telephone base near a sink, bathtub or shower.

Electrical storms

Electrical storms can sometimes cause power surges harmful to electronic equipment. For your own safety, take caution when using electric appliances during storms.

Cleaning your telephone

1. Your telephone has a durable plastic casing that should retain its luster for many years. Clean it only with a soft cloth slightly dampened with water or a mild soap.
2. Do not use excess water or cleaning solvents of any kind.

NOTE

Remember that electrical appliances can cause serious injury if used when you are wet or standing in water. If the telephone base should fall into water, **DO NOT RETRIEVE IT UNTIL YOU UNPLUG THE POWER CORD AND TELEPHONE LINE CORDS FROM THE WALL.** Then pull the unit out by the unplugged cords.

CAUTION

**RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERY ACCORDING TO THE INSTRUCTIONS.**

18. GUARANTEE

From the moment your Geemarc product is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com.

The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative.

The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

17 DECLARATIONS:

CE Directives

Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio and Telecommunications Terminal Equipment Directive 2014/53/UE.

The CE declaration of conformity may be consulted at www.geemarc.com

Recycling Directives

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin. Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.

For product support and help visit our website at www.geemarc.com
telephone **01707 387602**



UG DECT595PHOTO ULE_En_v1.0

geemarc™ UNITED KINGDOM
Telecom SA

5B Swallow Court
Swallowfields
Welwyn Garden City
Hertfordshire, AL7 1SB
For product support:

01707-387602

www.geemarc.com