



Aastra 6730a

Operation Guide



Table of Contents

Introduction	3
Phone Specification	3
Phone Parts	4
Key Panel.....	5
Bottom View.....	7
Basic Operation	8
Dial and Pre-dial	8
Call by Handsfree	8
Call by Headset	8
Music on Hold	8
Mute.....	8
Goodbye Key.....	8
Redial	8
Menu Operation	9
Phone Setting	10
Set Language	10
Set Ring Volume.....	10
Set Ring Melody	10
Set Handset Volume.....	10
Set Handfree Volume	11
Set Headset Volume.....	11
Set Password.....	11
Set Lock state	12
LCD Contrast.....	12
Set Flash Time.....	12
Set Time/Date.....	12
Date Format.....	12
Time Format	13
Area code setting.....	13
Alarm Setting	14
Alarm clock	14
Alarm duration	14
Alarm ON/OFF.....	14
Call Records	15
Speed Dial Memory	16
Message Waiting Memory (MWM).....	17
Phonebook.....	18
Caller ID display.....	19

Introduction

Aastra 6730a is an advanced line-powered analog phone. It supports multi-languages, call log management, volume adjustment, message waiting, configuration lock, and remote control through FSK signalling.

Phone Specification

General	
Color	Charcoal
Signal	Analog
Line supported	Single

 
Features	
Volume control	Handset / Headset (4 levels) Handsfree (8 levels)
Flash button flash time programmable	100ms, 200ms, 300ms (default), 400ms, 600ms, 900 ms
Compatibility with hearing aid	Yes
DTMF dialing	Yes
Incoming call/MWI indicator	Yes
Call waiting display	Yes
Caller ID display	FSK - Type 1 & 2
Missed call + received call	50 call records
Outgoing Call Log	50 call records
Phone book	100 records
Call Timer	Yes
Greeting Message / Owner number	Yes
Real time clock	Yes
Alarm clock	Yes
Display language	6 languages and adjustable by PBX
Reset calling/redial list	Manageable by PBX
Delete calling/redial list	Manageable by PBX
Remote handfree speaking	Manageable by PBX
Configuration lock (4-digit passcode)	Phone book, speed-dial memory and critical phone settings are lockable

Hardware and Interface	
LCD Display	Line 1: Functional icons Line 2: 16 digits (7-segments) Line 3: 16 characters (5x7 dot matrix)
LCD contrast adjustment	Support
LCD Backlit	None
LED calling signalization	Support
Handsfree with key	Support
Mute with key	Support
Hold with key	Support
Release with key	Support
Speed dial keys	Support
Redial with key	last 5 numbers
Navigational key	Yes
Ringer melody	8 types
Ringer volume	2 levels
Ringer Silence	Support
Headset interface	Support

Accessories	
Connection cable, RJ11/RJ45	1 pcs, 2 meters
Number card	1 pcs
Wall mounting kit	screws & anchors included

Phone Parts

When you unpack your phone, you should ensure that you have all of the following items. If any part is missing, contact the supplier of your phone.

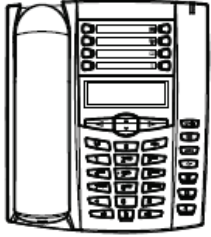


Telephone



Handset



 Handset Cord



Key Card



Telephone Base Desk Legs



Screws and Anchors for Wall Mounting

 










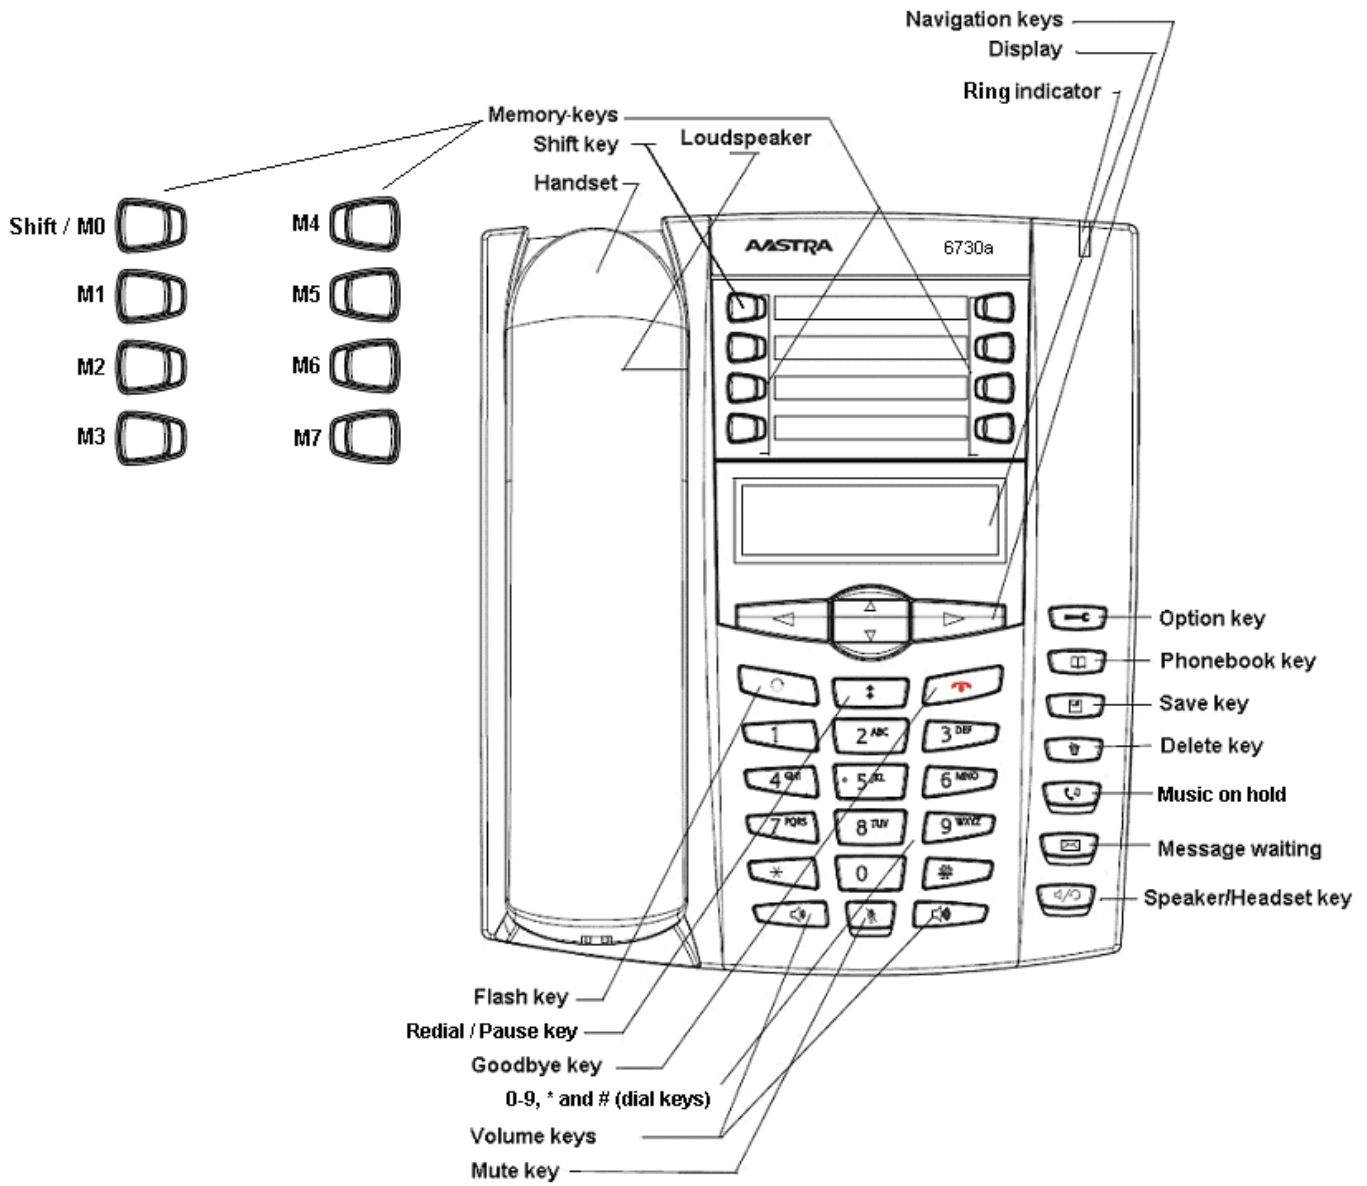




Telephone Line




Operation Guide

Key Panel



Symbols / Keys	Français	Español	Deutsch	Português	Nederlands	Italiano
Speed-dial Shift / M0-M7	<i>Numérotation abrégée Shift / M0-M7</i>	<i>Teclas programables Shift / M0-M7</i>	<i>Kurzwahl Shift / M0-M7</i>	<i>Marcação rápida Shift / M0-M7</i>	<i>Snel-kiezen Shift / M0-M7</i>	<i>Numeri brevi Shift / M0-M7</i>
Navigation keys 	<i>Touches de navigation</i>	<i>Teclas de navegación</i>	<i>Navigationstasten</i>	<i>Teclas de navegação</i>	<i>Navigatie toets</i>	<i>Tasti di scorrimento</i>
Flash key 	<i>R - Flash</i>	<i>Tecla Flash</i>	<i>R-Taste</i>	<i>Flash</i>	<i>Haakcontact</i>	<i>Tasto Flash</i>
Redial / Pause key 	<i>Touche Bis / Pause</i>	<i>Rellamada / Pausa</i>	<i>Wahlwiederholung / Pausentaste</i>	<i>Rechamar / Tecla de pausa</i>	<i>Nummerherhaling / Pauzetoets</i>	<i>Bis / Pausa</i>
Goodbye key 	<i>Fin / Fin d'appel</i>	<i>Desconectar</i>	<i>Ende Taste</i>	<i>Desligar</i>	<i>Beëindigen</i>	<i>Tasto Riaggancio</i>
0-9, * and # (dial keys)	<i>0-9, * et # (numérotation)</i>	<i>0-9, * y # (digitos)</i>	<i>0-9, * und # (Zifferntasten)</i>	<i>0-9, * e # (teclas marcação)</i>	<i>0-9, * en # (bel toetsen)</i>	<i>0-9, * e # (tasti selezione)</i>
Volume keys 	<i>Réglage du volume</i>	<i>Volumen</i>	<i>Lautstärketasten</i>	<i>Volume</i>	<i>Volume toetsen</i>	<i>Tasti regolazione volume</i>
Mute key 	<i>Touche secret</i>	<i>(Mute) silencio</i>	<i>Stummtaste</i>	<i>Silencio</i>	<i>Mute-toets</i>	<i>Tasto mute</i>
Option key 	<i>Touche option</i>	<i>Tecla de opción</i>	<i>Optionswahltaste</i>	<i>Opções</i>	<i>Instellingen</i>	<i>Tasto opzioni</i>
Phonebook key 	<i>Répertoire</i>	<i>Agenda</i>	<i>Telefonbuchtaste</i>	<i>Agenda</i>	<i>Telefoonboek</i>	<i>Tasto Rubrica</i>
Save key 	<i>Sauvegarde</i>	<i>Salvar</i>	<i>Speichertaste</i>	<i>Guardar</i>	<i>Opslaan</i>	<i>Tasto salvataggio</i>
Delete key 	<i>Suppression</i>	<i>Borrado</i>	<i>Löschtaste</i>	<i>Suprimir</i>	<i>Verwijderen</i>	<i>Tasto cancella</i>
Music on hold 	<i>Musique d'attente</i>	<i>Música en espera</i>	<i>Musik bei Warten</i>	<i>Música em espera</i>	<i>Muziek tijdens wachten</i>	<i>Musica d'attesa</i>
Message waiting 	<i>Message déposé</i>	<i>Mensaje en espera</i>	<i>Nachricht wartet</i>	<i>Mensagem em espera</i>	<i>Wachtend bericht</i>	<i>Messaggio Giacente</i>
Speaker / Headset 	<i>Haut-parleur / Casque</i>	<i>Altavoz / Tecla de manos libre</i>	<i>Lautsprecher / Kopfhörertaste</i>	<i>Mãos-livres / Auricular</i>	<i>Luidspreker / hoofdfonefoon</i>	<i>Altoparlante / Cuffia</i>

 Bottom View

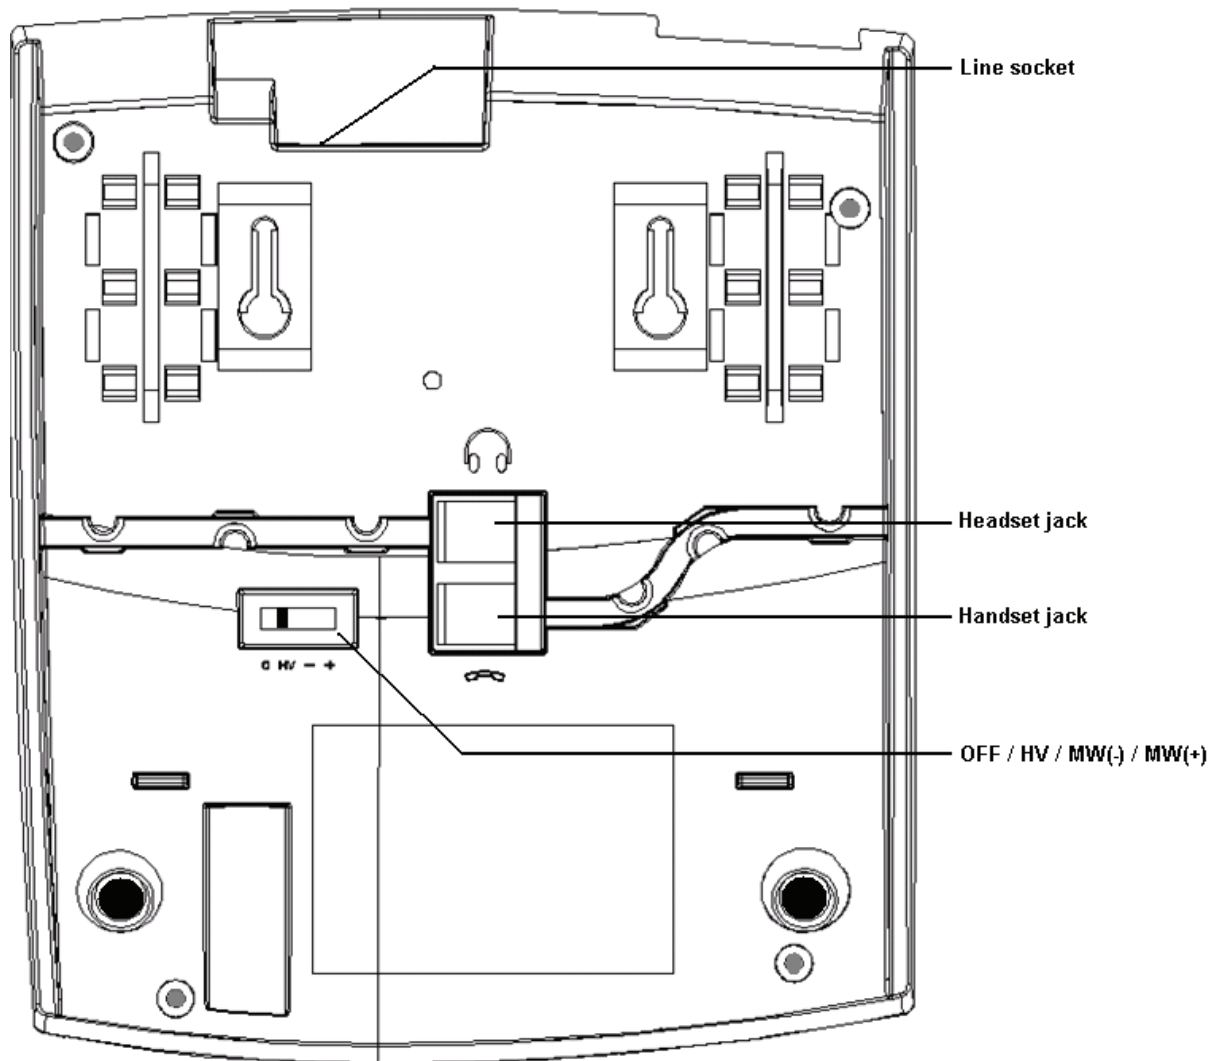

Symbols / Keys	Français	Español	Deutsch	Português	Nederlands	Italiano
Line socket	<i>Prise de ligne téléphonique</i>	<i>Puerto conneccion de linea</i>	<i>Anschlussbuchse</i>	<i>Conector de linha telefónica</i>	<i>Lijnpoort</i>	<i>Preso linea telefonica</i>
OFF / Hi Volt / MW(-) / MW(+)	<i>Off / Haute Tension / MW(-) / MW(+)</i>	<i>DE / Alto voltaje / MW(-) / MW(+)</i>	<i>AUS/Spannung/ MW(-) / MW(+)</i>	<i>OFF / Hi Volt / MW(-) / MW(+)</i>	<i>UIT / Hi Volt / MW(-) / MW(+)</i>	<i>OFF / Alta Tensione / MW(-) / MW(+)</i>
Headset Jack	<i>Prise casque</i>	<i>Puerto de auricular</i>	<i>Kopfhörerbuchse</i>	<i>Conector de auricular</i>	<i>Hoofdtelefoon aansluiting</i>	<i>Preso Cuffia</i>
Handset Jack	<i>Prise combine</i>	<i>Puerto de microtelefono</i>	<i>Hörerbuchse</i>	<i>Conector do auscultador</i>	<i>Telefoonhoorn aansluiting</i>	<i>Preso Microtelefono</i>

Basic Operation

Dial and Pre-dial

Dial

Pick up the handset (or press [📞] for handsfree / headset operation) and press numeric key, [*], [#] or [Pause] to dial out.

Pre-dial

During on-hook, press numeric key, [*], [#] or [Pause] for the number to be dialed (max. 32 digits). Press [📞] or [▶] key or pick up the handset, the phone will dial out the number.

Call by Handsfree

1. Press [📞] and enter the number by using the dial pad.
2. To hang up the phone, press [📞] again.
3. When you are talking on handset, you can switch to handsfree mode by pressing [📞].

Call by Headset

1. Insert a headset to the phone
2. Press [📞] and enter the number using the dial pad.
3. To hang up the phone, press [📞] again.
4. When you are talking on handset, you can switch to headset mode by pressing [📞].

Music on Hold

1. When a call is in progress, press [📞] to hold the call (LED on).
2. Press [📞] again or toggle the hook switch to resume the call (LED off).

Mute

1. When a call is in progress, press [📞] to mute (LED flashing).
2. To speak to the caller, press [📞] again (LED off).





 

Goodbye Key

1. During off-hook by handset, press [📞] to process another call.
2. During off-hook by handsfree/headset, press [📞] to hang up.

Redial

1. Press [📞], the display shows the last number you have dialed.
2. There are up to 5 most recent redial number, press [▲] or [▼] to view the records.
3. Lift the handset or press either [📞] or [▶] to dial out.

Menu Operation

- Press [] to enter into main menu.
- Press [] or [] to scroll up and down for different options.
- Press [] or [] to enter the submenu / confirm selection.
- Pressing [] to visit the previous menu

Main menu	Submenu	Settings	Lock Protected	Default
PHONE SETTING	SET LANGUAGE	English, Français, Español, Deutsch, Português, Italiano	Yes	ENGLISH
	RING VOL	OFF / LOW / HIGH	No	HIGH
	RING MELODY	RING 1 ~ 8	Yes	RING 1
	SET HANDSET VOL	1 ~ 4	No	3
	SET HANDSFREE VOL	1 ~ 8	No	7
	SET PASSWORD	4 digits combination	Yes	0000
	SET LOCK STATE	LOCK / UNLOCK	Yes	UNLOCK
	LCD CONTRAST	1 ~ 4	No	2
	SET FLASH TIME	100ms / 200ms / 300ms / 400ms / 600ms / 900ms	Yes	300ms
	SET TIME/DATE	24H, MM/DD	Yes	00:00, 01/01
	DATE FORMAT	MM/DD or DD/MM	Yes	MM/DD
	TIME FORMAT	12/ 24 HOURS	Yes	12H
	LOCAL AREA CODE	3 ~ 5 digits combination	Yes	-----
ALARM SETTING	ALARM CLOCK	24H	Yes	00:00
	ALARM INTERVAL	5 / 10 / 15 / 30 min	Yes	10min
	ALARM ON/OFF	ON / OFF	Yes	OFF
CALL RECORD	MISSED CALL	<i>(View only)</i>	No	
	DIALED CALL	<i>(View only)</i>	No	
	ANSWERED CALL	<i>(View only)</i>	No	

Phone Setting

Set Language

1. Press [**←C**] > PHONE SETTING > SET LANGUAGE
2. Press [**▲**] or [**▼**] to choose the favourite language (English, Français, Español, Deutsch, Português, Nederlands, Italiano)
3. Press [**←C**] or [**▶**] to confirm

Set Ring Volume





1. Press [**←C**] > PHONE SETTING > RING VOL
2. Press [**▲**] or [**▼**] to adjust the ringer volume (OFF / LOW / HIGH)
3. Press [**←C**] or [**▶**] to confirm

Set Ring Melody

1. Press [**←C**] > PHONE SETTING > RING MELODY
2. Press [**▲**] or [**▼**] to choose ring melody (MELODY 1 to 8)
3. Press [**←C**] or [**▶**] to confirm

Set Handset Volume









1. Press [**←C**] > PHONE SETTING > SET HANDSET VOL *or* Pick up the handset
2. Press [**▲**] or [**▼**] to adjust the volume on the handset.



Handset Volume	Display Icon
Level 4 (max)	
Level 3	
Level 2	
Level 1 (min)	

3. Press [**←C**] or [**▶**] to confirm



 
Set Handfree Volume





1. Press [] > PHONE SETTING > SET HANDFREE VOL or Press [] to activate handfree
2. Press [] or [] to adjust the volume on handfree loudspeaker.



Handfree Volume	Display Icon
Level 8 (Max.)	
Level 7	
Level 6	
Level 5	
Level 4	
Level 3	
Level 2	
Level 1 (Min.)	

3. Press [] or [] to confirm








Set Headset Volume

1. Plug in the headset
2. Press []
3. Press [] or [] to adjust the volume on the headset.

Headset Volume	Display Icon
Level 4 (max)	
Level 3	
Level 2	
Level 1 (min)	

4. Press [] or [] to confirm

Set Password

1. Press [] > PHONE SETTING > SET PASSWORD
2. Press numeric keys to input the OLD password (default – '0000')
3. Press [] or [] to confirm the OLD password
4. Press numeric keys to input the NEW password
5. Press [] or [] to confirm the NEW password
6. Enter the NEW password again for reconfirmation
7. Press [] or [] to complete the setting

Set Lock state

1. Press [←] > PHONE SETTING > SET LOCK STATE
2. When the display shows “ENTER PASSWORD”, enter the password

If the phone was locked:

3. the display shows “UNLOCK?”
4. Press [←] or [→] to unlock / Press [⏻] or [⏪] to quit without change

If the phone was unlocked (default):

5. the display shows “LOCK?”
6. Press [←] or [→] to lock / Press [⏻] or [⏪] to quit without change

Note: The phone was defaultly unlocked. While the state is changed to ‘LOCK’, you need to enter password for deleting the calls record and phonebook or to change the settings which are lock protected (see “Menu Operation”)

LCD Contrast

1. Press [←] > PHONE SETTING > LCD CONTRAST
2. Press [▲] or [▼] to adjust the display contrast
3. Press [←] or [→] to confirm

Set Flash Time

1. Press [←] > PHONE SETTING > SET FLASH TIME
2. Press [▲] or [▼] to select the needed flash time
3. Press [←] or [→] to confirm

Set Time/Date

1. Press [←] > PHONE SETTING > SET TIME/DATE
2. Press [▲] or [▼] to adjust the “time”
3. Press [←] or [→] to confirm
4. Press [▲] or [▼] to adjust the “date”
5. Press [←] or [→] to confirm

Date Format

1. Press [←] > PHONE SETTING > DATE FORMAT
2. Press [▲] or [▼] to select the date format (MM/DD or DD/MM)
3. Press [←] or [→] to confirm

Time Format

1. Press [←C] > PHONE SETTING > TIME FORMAT
2. Press [▲] or [▼] to select the time format (12 Hours or 24 Hours)
3. Press [←C] or [▶] to confirm

Area code setting

1. Press [←C] > PHONE SETTING > LOCAL AREA CODE
2. Press [▲] or [▼] to set each digit
3. Press [▶] to confirm and move to next digit setting. The area code can be set in maximum 5 digits combination
4. After finishing the setting press [▶] twice or move to the last digit and leave

Alarm Setting

Alarm clock

The alarm clock should be set as 24H, HH/MM and phone should then activate the alarm in 5 sec after the local clock reached the set time in alarm clock

1. Press [←] > ALARM SETTING > ALARM CLOCK
2. Press [▲] or [▼] to adjust the time
3. Press [←] or [→] to confirm

Alarm duration

The option for selecting the desired alarm interval.




1. Press [←] key > ALARM SETTING > ALARM INTERVAL
2. Press [▲] or [▼] to select the alarm duration (5 / 10 / 15 / 30 min; default 10 min)
3. Press [←] or [→] key to confirm

Alarm ON/OFF


 




1. Press [←] key > ALARM SETTING > ALARM ON/OFF
2. Press [▲] or [▼] to select ON / OFF to enable / disable the alarm
3. Press [←] or [→] key to confirm

Call Records





View Call Records

1. Press [] > CALL RECORD
2. Press [▲] or [▼] to select “MISSED CALL” / “DIALED CALL” / “ANSWERED CALL”
3. Press [] or [] to view the calls list.
4. Press [▲] or [▼] to scroll the list. Hold the [▲] / [▼] key for 3s could activate fast scrolling



Delete Call Records

1. To delete a call record, press []
2. When you will see ‘DELETE?’, press [] to confirm or [] or [◀] to cancel the deletion.
3. If you want to delete ALL the records, press and hold [] for 3 seconds.
4. When you will see ‘DELETE ALL?’, press [] to confirm or [] or [◀] to cancel the deletion.

Save One-touch / Two-touch memory / Phonebook from Call Records

1. Select the call record that you wish to save. Press [] to confirm
2. input the Name and press [] twice
3. The display shows ‘M?  ?’, press (M1-M7) or SHIFT+(M0-M7) or [] to save

Dial Back from Call Records

1. Select the call record that you wish to call.
2. Lift the handset or press either [] or [].

Area Code Filter

If area code was set (see “Area code setting”), the phone will compare and filter the initial digits of the incoming number.

An example:

The area code was set “755”.

If the incoming call’s number is “755-12345678”, then caller ID will be displayed “12345678” while “755” will be filtered.

Note: Only numbers with 7 digits or longer could be filtered the area code. Otherwise the complete number with area code will be displayed

Speed Dial Memory

Save a Memory

1. Place the handset on the phone
2. Press “one-touch” memory key (M1 to M7) or “two-touch” memory keys (Shift + M0 to M7)
3. Press [☐] and enter the name to be saved
4. Press [☐] key again, enter the number to be saved and finish by Press [☐] key to complete saving

Dial from a Memory

1. Pick up the handset or press [📞]
2. Press “one-touch” memory key (M1 to M7) or “two-touch” memory keys (Shift + M0 to M7) to be dialed

Delete Memory

1. Place the handset on the phone
2. Press “one-touch” memory key (M1 to M7) or “two-touch” memory keys (Shift + M0 to M7) to be deleted
3. Press [🗑️]

Message Waiting Memory (MWM)

The message waiting memory normally stores the number to reach the voicemail box.

Save MWM

1. Place the handset on the phone and press [✉]
2. Press [☐] and enter the number to be saved
3. Press [☐] key again to complete saving

Dial from a MWM

1. Pick up the handset or press 'Speaker/Handset'
2. Press the [✉]

Delete MWM


1. Place the handset on the phone
2. Press [✉]
3. Press [🗑]

Message Waiting LED





When there's message awaiting to be read, the message waiting LED will be lighted ON or flashing in red.

The Message Waiting switch (at the back of the phone) is used to select the appropriate MW mode (HV / + / -). Please check the MW type of the connected PBX to work with the phone. Select "OFF" on the MW switch to deactivate the message waiting function.




Phonebook

1. Press [], the display shows “SEARCH”.
2. Press [▲] or [▼] to select “SEARCH” or “ADD”.





Search Phonebook

1. Select SEARCH and press [] key to enter Phonebook viewing state
2. Press [▲] or [▼] to view the records. Hold the [▲] / [▼] key for 3s could activate fast scrolling
3. Lift the handset or press either [ / ] or [] to dial out.

Add Phonebook

1. Select ADD and press [] key to enter into Phonebook modification state.
2. Enter the name you wish to record and press [] to save.
3. Enter the number using the dial pad and press [] to save.

Delete Phonebook



1. In Phonebook viewing state, press [▲] or [▼] to find the record you want to delete.
2. Press [] and you will see ‘DELETE?’, then press [] to confirm the deletion.
3. If you want to delete all the records, press [] for 3 seconds. Then you will see ‘DELETE ALL?’, then press [] to confirm.

Note: If the phone was locked, you need to enter the password for deleting the calls phonebook and calls record (see “Set Lock State”).

Caller ID display

After receiving a new incoming call, the number will display on LCD and hold for 10s, during this time, if received another new call, it will continue to display for 10s and display corresponding icon.


Incoming calls records include the Number, Name, Date/Time, Caller Timer, Repeated call icon, New missed call icon, Missed call icon and Received call icon.

Repeated Call	New Call	Incoming call	Out going call	Missed Call	Received Call
REP	NEW	IN	OUT		

If the record is full, the next incoming call will replace the oldest record one by one.

After viewing new missed incoming calls, the “New call” icon will disappear, and “Missed call” icon will be shown.

 WALL MOUNT DRILLING TEMPLATE

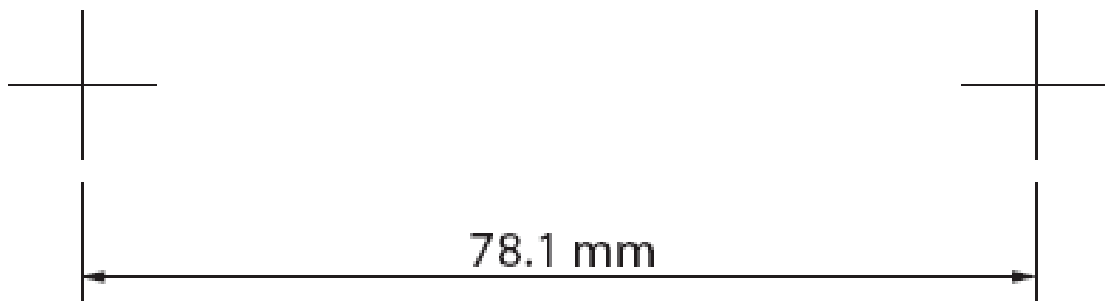

EC-Declaration of conformity

Déclaration de conformité CE

EG-Konformitätserklärung

Declaración de conformidad CE



AASTRA France (1 rue Arnold Schoenberg – 78280 Guyancourt – France) hereby declares that:

This product, Aastra 6730a, is in conformity with the essential requirements and other relevant provisions of the European Directive 1999/5/EC (R&TTE Directive)

Le poste Aastra 6730a est conforme aux exigences essentielles de la directive 1999/5/EC

Dieses Gerät Aastra 6730a entspricht den grundlegenden Anforderungen der Richtlinie 1999/5/EG

Este equipo Aastra 6730a cumple con los requisitos esenciales de la directiva 1999/5/CE

<http://www.aastra.com>

Ref: AMT/PUD/TR/0107/1/1/EN