




HOSMART

Quick Start Guide

Overview

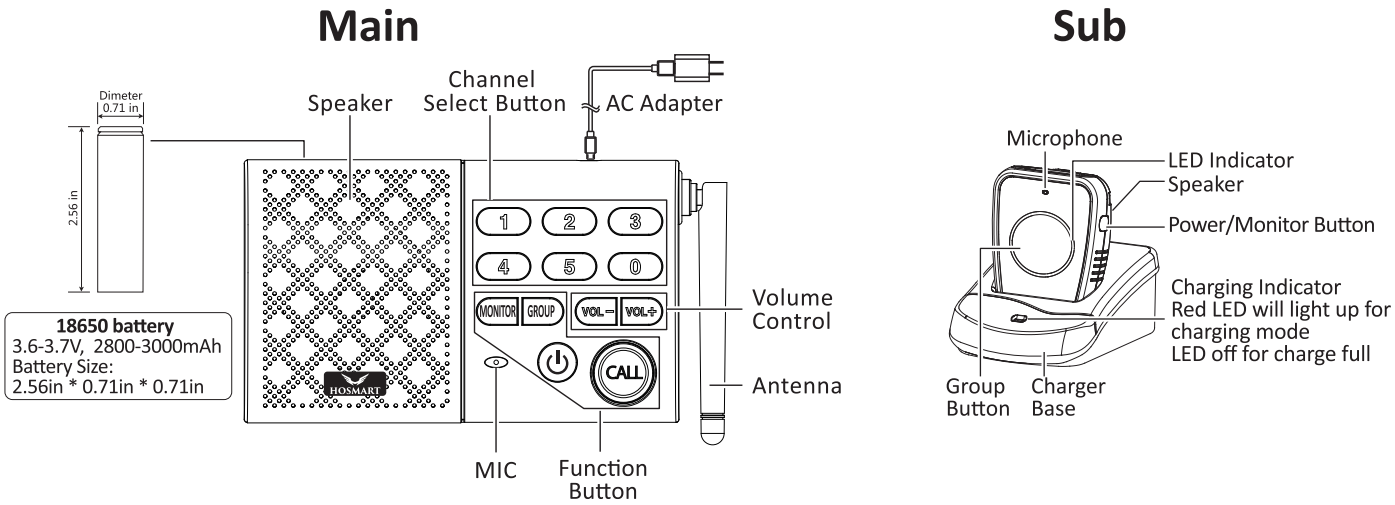

Setup & Operation

Setup

Step 1: Power

- 1). Plug the micro USB cable into the USB port on the back of unit, then connect to the AC adapter and plug into a power supply.
- 2). Press the Power button to turn ON the intercom.
- 3). Press and hold the Power button for 3 seconds to turn OFF.

Note: Main default channel, #0 will illuminate red.

Step 2: Registration

1. All products need to be registered together initially when you are pairing for the first time.
2. Hold the #0 and #3 button on the Main unit simultaneously. You will hear a Beep tone and the LED Call button LED will begin to flash to show the registration states.
3. Press the Group button for 3 seconds to register the Sub. Then you will hear a Beep tone that indicates the pairing was successful.

Note: Up to 5 Sub units can be registered. The channel number will be assigned automatically.

Operation

Making a Call

- 1). If only calling a single Sub, you may simply press the call button or the channel number on the main unit to initiate a call.
- 2). If calling multiple Subs, you may press the call button and then press the channels you wish to communicate with. The channels will begin to flash to indicate which ones are available after pressing the call button. You may press the channel that you wish to contact to initiate the call directly.
- 3). If the Main initiate a call to the Sub, press the Group button on the Sub to answer the call.
- 4). Short press the Group button to end a call.
- 5). If the Sub initiate a call to the Main, the Main and all registered-on Main unit can answer the call directly. Long press "Group" button to end a call.

Monitor:

- 1). Press the Monitor button on the Main unit and then press the Channel Number that you want to monitored (the channel number will start flashing to show all available channels after pressing the Monitor button) to initiate monitor mode.
- 2). Press the Monitor on the Sub then the Sub will enter into monitor mode.

Short press the Group button to exit Monitor Mode.

Note: The Sub unit and Main unit can monitor each other. NOT between the Sub units.