 


Part 1. Introduction

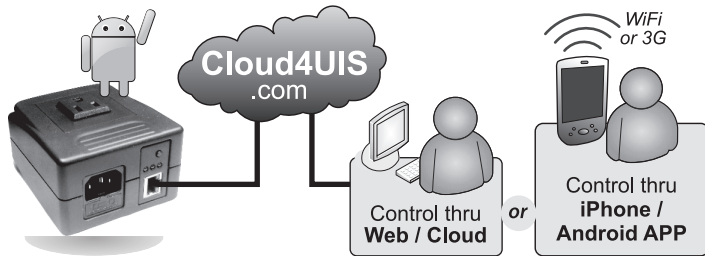


Features:

- Set outlet to auto reset when ping fails.
eg.: Auto reset unresponsive router, modem, IP Cam, NAS or network device.
- Remotely turn outlet On/ Off/ Reset from APP, Cloud4UIS.com or Web.
eg.: To manually reset network device.
- Set scheduled outlet On/ Off/ Reset.
eg.: Schedule IP Cam, WiFi AP, etc to reset.

Part 2. How to Setup & 'Add' Device

 
1. Download ezDevice APP & Sign up for a Cloud4UIS account

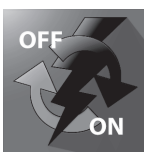

For smartphone users:
Search for 'ezDevice' APP and install. Run APP and [Sign up] for a Cloud4UIS account.

For PC users:
Browse to www.Cloud4UIS.com and [Sign up].

 2

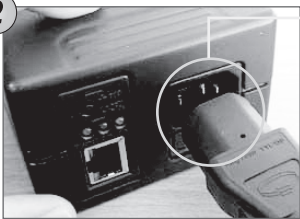

Connect power to device

Red LED will turn ON to indicate the outlet is ON (default).

Green and Yellow LED remain OFF (see Part 4. LED Indicators).

3

 


Connect LAN cable to device

Green LED will BLINK to indicate internet is normal (online) and Auto Reset function is disabled.

Note:
Enable Auto Reset and ezOutlet2 will auto power-cycle when Ping fails.

4

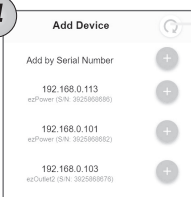

Search & select device to Add to Account

From ezDevice APP or Cloud4UIS account, select [Add Device] to locate device. APP / PC needs to be in the same network as device.

If APP / PC is not in the same network as device, select [Add by Serial Number].

5



Add device to account

Enter the device ID (see label behind device) and click [Next].




Notes:

- Each device can only be 'Added' once.
- Once 'Added' to a cloud account the Yellow LED will turn ON.
- The 'Adder' becomes the device 'Owner'.
- 'Owner' can share device with other Cloud4UIS users and set user's access permission.

Part 3. How to Remove 'Added' Device

1. From APP or Cloud4UIS:
Select [Remove Device].

 2. From device's 'Function Button':

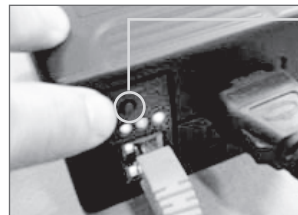

- Press & hold button for 10 sec.
- Green & Red LED will blink.
- Release button.

Note:

This action removes ALL connected users from this device and resets it to default.

Part 4. LED Indicators

LED	ON	OFF	Blinking
Green	Internet normal & Auto Reset Enabled	No Internet	Internet normal & Auto Reset Disabled
Red	Outlet ON	Outlet OFF	
Yellow	Connected to remote server	Device not 'Added'	Not connected to remote server

LED blinks in sequence

Green > Red > Yellow >> Green > Red > Yellow > ...
Device firmware is upgrading.

Part 5. Description

 
Function button:

Press:
1x = toggle 'Auto Reset'
2x = toggle outlet On/Off
Hold:
10sec = Reset to Default

Green / Red / Yellow LED indicators

LAN port:

Replug LAN:
Enable 'Add' mode for 3 seconds.

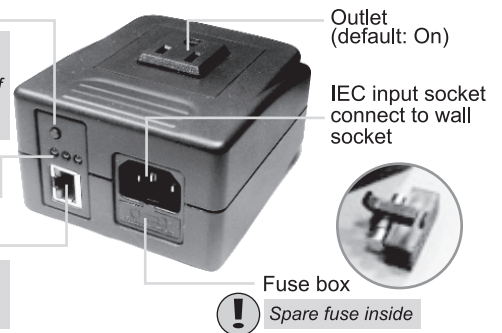

rev. 7817



ezDevice APP available from:



User Guide


ezOutlet2 Designed to Auto Reset Crashed Network Device

Part 6: Control ezOutlet2 thru Web User-Interface

Access ezOutlet2 Web User-Interface over LAN or WAN (with port forwarding) to manage and control.

- To locate ezOutlet2 LAN IP, either;
- Check APP under Network > LAN IP or;
 - Run Netlity to search (must be in same LAN as device).

 Default Web User-Interface login;
Login: admin
Password: admin

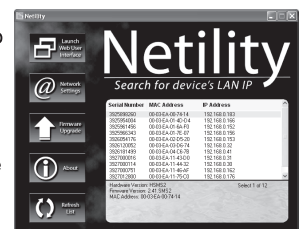

Download from:
<http://www.MSNswitch.com>