


### **USER MANUAL**

## Analog Robust Telephone YTCS10

#### Connection


Connect the telephone to your system.

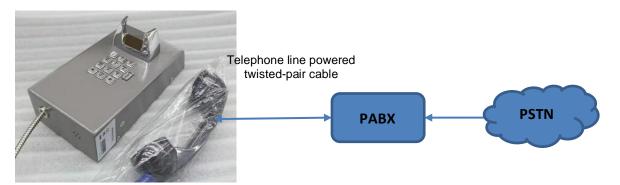

#### Operation

- -Receiving calls: Lift the handset when ringing
- -Making calls: Lift the handset to dial out
- -Ending calls: Handset On-hook

#### Installation

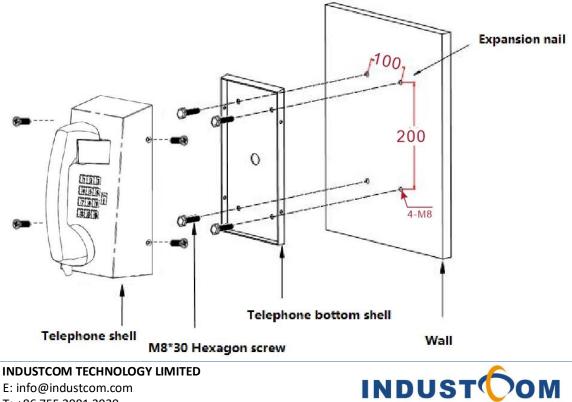

E: info@industcom.com T: +86 755 2981 3939

# INDUSTOOM

#### Advance Programming

Setup by local keypad or by phone calls when the call gets through. Note: All the commands as below table. Settings must begin with programming password.

* <b>#9999</b> #205#		
*#	Start programming	
9999	Programming password	
#	Separator	
20	Program parameter (Program max call time)	
5	Data value (Max call time 5mins)	
#	Separator	

Code	Description	Default	
00?#	Change programming password, where ? = 4 digits	9999	
000#	Reset programming password to default 9999	N/A	
20?#	Max call time, where ? = 0-255 mins, 0=no limit	0	
999#	Restore factory settings	N/A	
Hear DTMF tone twice "Di Di" for valid operation; Silence means invalid operation.			

### Additional

programming options:

Code	Description	Default
*#9999#31?#	Setting flash time(when you press "R" button), where ? = 100-900MS	600
*#9999#71?#	Setting up to dial the specified number every few days, where ? = 1-9, 0 means closing this function	0
*#9999#72?#	Setting the number to call every few days, where ? = 3- 16 digits	N/A
*#9999#73?#	Setting the duration of calls made every few days, where ? = 0-99s, to make sure the number you set up is online	20

