

FMN B122plus

Instructions for use

FMN B122plus



Safety precautions

Safety precautions

- Do not open the device yourself, allow repairs by authorised specialists only!
- Do not use or install your telephone in rooms with danger of explosion and near electromagnetic fields (e.g. domestic appliances, TV or video recorders)!
- The telephone is not splash-proof. For your own safety, do not operate the phone in damp environments such as bathrooms, showers etc.!
- The last step before beginning operation is to plug the telephone connecting cord into the wall socket!
- The first step when ending operation is to remove the telephone connecting cord from the wall socket!
- The telephone connecting cord is only to be plugged into the designated socket!
- The telephone connecting cord is immediately to be removed from the socket if there is danger of touching conductive parts due to improper use!
- Using the telephone during thunderstorms is on one's own risk!
- The telephone should only be passed on to third parties if the complete operating instructions are included!
- When the telephone has reached the end of its service life, it should be disposed of in an environmentally friendly manner!

Copyright

All rights reserved.

Duplication of these instructions for use or parts thereof by any reproduction method whatsoever is not permitted without prior permission of the manufacturer.

Amendments may be published without prior notification.

Notwithstanding the above declaration, the manufacturer accepts no liability for errors in these instructions or their consequences.

Table of contents

Safety precautions	2
Introduction	4
Dialling method (pulse / DTMF dialling)	4
Setting up and putting into operation.....	4
Plugging in the handset cord	4
Connecting the telephone	4
Labelling	4
Installation and maintenance	5
Operating panel / key assignment	5
Redial key	5
Recall key	6
Mute key	6
Special keys: asterisk, hash, A, B, C and D (operation with ABCD keys)	6
Fast dialling keys	6
Storing a call number on a fast dialling key	7
Deleting a stored call number	7
Dialling a call number using the fast dialling key	7
Shortcode memory	7
Storing a call number on a digit key	7
Deleting a stored call number	8
Dialling a call number using the shortcode memory	8
Temporary switching from pulse dialling to DTMF dialling	8
The PIN and it's purpose	9
Ringer	9
Ringer volume	9
Ringer repetition frequency	9
Locking the keypad (except during ABCD mode)	10
Locking the keypad (except fast and shortcode dialling keys)	10
Unlocking the keypad	10
Changing the dialling method (PD / DTMF) and the basic settings	10
Operation in a telephone system (PBX)	11
Trunk codes	11
Programming a trunk code	11
Deleting trunk codes	11
Operating the ABCD keys	11
General introduction	11
Programming an automatic flash on the ABCD keys	12
Programming an automatic flash	12
Deleting the automatic flash	12
Handset standby position	12
Malfunctions	12
Connection permit	12
Technical data	12

Setting up and putting into operation

Introduction

The wall-mounted telephone B122plus offers all important normal telephone features like any other telephone. You can normally lift the handset and dial the required call number using the digit keys 1 to 0. Additional features of your telephone are:

- 3 fast dialling keys
- 10 call number memories
- keypad lock
- programmable keys A, B, C, D for DTMF services

Please read the following instructions carefully in order to get fully acquainted with all the functions of the telephone.

Dialling method (pulse / DTMF dialling)

The FMN B122plus has been designed for use on public telephone lines and telephone systems with PD or DTMF dialling.

PD = Pulse dialling

DTMF = Dual Tone Multifrequency dialling

See chapter 11 "Changing the dialling method (PD / DTMF) and the basic settings"

Default settings

1. DTMF dialling is set.
2. Recall key is set to flash.
3. The PIN is set to "0 0 0".
4. Ringer: volume is set to 4 (loud), repetition frequency is set to 1 (slow).
5. The flash time is set to 90 ms.

Setting up and putting into operation

Plugging in the handset cord

Plug the long straight end of the handset cord into the smaller socket located on the bottom of the telephone, marked with the handset symbol, till it snaps safely into place. For strain relief, press the cable into the two lower guide grooves inside the case and under the lock catch. The cord will be led outside through the outer guide groove located on the bottom side of the case. Attach the other end into the handset till it snaps into place.

Connecting the telephone

Put the small plug into the second (bigger) socket located on the back of the telephone till it snaps into place. Press the cable into the upper and lower guide grooves inside the case and lead it through the second guide groove on the bottom of the case outside. Plug the end into the wall socket.

Labelling

Use the labelling cards (copy or clip from this manual, see page 14) to insert emergency numbers, your own call number and for lettering the fast dialling keys.

Insert the emergency numbers above the fast dialling keys.

Gently lift off the plastic cover, take the protection foil off the cover and reinsert the cover.

Installation and maintenance

The wall-mounted telephone is rugged and maintenance-free. The telephone should be installed close to a TAE jack (German standard) at a conventional height of about 145 cm. The design of the case leaves the option (when the wall socket is installed by authorised specialists) of covering both the TAE jack and the telephone connecting cord.

The telephone is screwed to the wall with 2 hexagon-head screws and 2 washers (use the drilling template provided in this manual). Screw the top hexagon-head screw into the wall until the telephone can be placed on it without clearance. Even out the telephone horizontally and screw the bottom hexagon-head screw tight using a spanner. To cover the TAE jack, you have to use the measures in brackets () of the drilling template. Store the telephone connecting cord inside the case.


Tools required:

power drill / twistdrill - diameter 6 mm / open-jawed spanner

Use only a moist soft cloth or an antistatic duster to clean the telephone. So you avoid that dust increasingly collects on the telephone due to static charging of the plastic material.

Do not use substances that damage the plastic surface of the phone.

Operating panel / key assignment

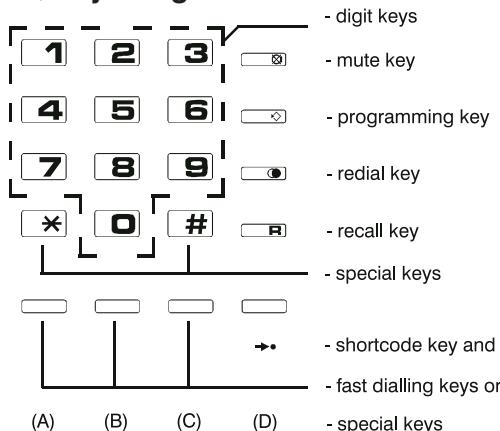

Redial key

In case that the line is busy or the party you called does not answer, replace the handset or actuate the cradle switch. The telephone automatically stores the call number (max. 20 digits) dialled last.

Starting last number redial:

1. Lift the handset.
2. Press the redial key .

The telephone automatically dials the call number entered last.

Note:

If you have to press the recall key to get access to the telephone line (only applicable for extensions), this function is stored together with the call number.

Operating panel / Key assignment

Recall key

You can transfer an incoming call within your telephone system or make a consultation call via the recall key. You can also get access to the telephone line if this is required by your telephone system. Getting access to the line is stored in the redial memory.

Making consultation calls to an extension or call transfer:

1. Press the recall key .
2. Await the dial tone.
3. Dial the number of the extension line.
4. The other party answers.
5. Talk or announce the call.
- 6.1. Retrieve the call by pressing the recall key  again or
- 6.2. transfer the call (see instructions of your telephone systems).
7. Replace the handset.

Note:

Please bear in mind that the number of consultation calls is also stored in the redial memory.

Mute key

Via this function, you can switch off the microphone of the handset, e.g. if you do not want the person you are talking with to hear a question asked in the room.

Switch off the handset:

1. Press the mute key .
2. Talk into the room.

Switch on the handset:

1. Press the mute key .
2. Continue the call (with the customer).

Note:

The mute function is as well switched off when you replace the handset or press any other key.

Special keys asterisk , hash , A, B, C and D (operation with ABCD keys)

These keys enable you to activate certain service features of your telephone system (during DTMF operation). For detailed information, please see the manual of your telephone system.

During pulse dialling, you can transfer data traffic and use other services (e.g. paging system and remote control of answering machine) by switching temporarily to DTMF via the asterisk  or the hash key .

Fast dialling keys

The three fast dialling keys of the FMN B122plus (available except during ABCD operation) enable the user to store 3 frequently used call numbers. Each fast dialling key can store up to 20 digits.

Storing a call number on a fast dialling key

In order to store a call number on a fast dialling key, follow the steps below:

1. Lift the handset and await the dial tone.
2. Press the programming key .
3. Press the digit keys 8 and 5.
4. Enter the PIN.
5. Press the desired fast dialling key .
6. Enter the call number.
- 7.1. If you want to store further call numbers:
Press another fast dialling key  and enter the desired call number.
- 7.2. If you do not want to store further call numbers:
Press the programming key  and the number is stored.
8. Replace the handset.

Note:

Additionally, the recall key function (to get access to the telephone line) can be stored with the entered call number by pressing the recall key . If you entered a wrong digit during the procedure of storing a call number, you can delete the last digit any time by pressing the mute key .

You can proceed storing the call number without interrupting the storing procedure.

If your PIN is "0 0 0", you can skip steps 3 and 4.

Deleting a stored call number

If you insert a new call number on a fast dialling key, the previously stored call number is automatically deleted.

Dialling a call number using the fast dialling key

1. Lift the handset and await the dial tone.
2. Press the desired fast dialling key.

The stored call number is dialled automatically now.

Suffix dialling:

It is possible to store only parts of a call number (e.g. a number of a customer) and dial the remaining digits of the number (e.g. extension number) via keypad.

Note:

Suffix-dialed numbers do neither appear in the fast dialling nor in the redial memory. Call numbers dialled by the use of fast dialling keys are not stored in the redial memory.

Shortcode memory

The FMN B122plus (available except during ABCD operation) can store up to 10 numbers on shortcode memories. Each digit key provides a memory for this and has a capacity of 16 digits.

Storing a call number on a digit key

In order to store a call number on a shortcode memory, follow the steps below:

1. Lift the handset and await the dial tone.
2. Press the programming key .
3. Press the digit keys 8 and 5.

Shortcode memory / Temporary switching dialling

4. Enter the PIN.
5. Press the shortcode key .
6. Press the desired digit key.
7. Enter the call number.
- 8.1. If you want to store another call number:
Press the shortcode key  and then another digit key and enter the call number.
- 8.2. If you do not want to store further call numbers:
Press the programming key  and the call number is stored automatically.
9. Replace the handset

Note:

Additionally, the recall key function (to get access to the telephone line) can be stored with the entered call number by pressing the recall key . If you entered a wrong digit during the procedure of storing a call number, you can delete the last digit any time by pressing the mute key . You can proceed storing the call number without interrupting the storing procedure. If your PIN is "0 0 0", you can skip steps 3 and 4.

Deleting a stored call number

If you insert a new call number in one of the shortcode memories, the previously stored call number is automatically deleted.

Dialling a call number using the shortcode memory

1. Lift the handset and await the dial tone.
2. Press the shortcode key  and afterwards the relevant digit key.

The stored call number is dialled automatically.

Suffix dialling:

There is an option to store only parts of a call number (e.g. a number of a customer) and dial the remaining digits of the number (e.g. extension number) via the keypad.

Note:

Suffix-dialled numbers do neither appear in the shortcode nor in the redial memory. Call numbers dialled using the shortcode keys are also not stored in the redial memory.

Temporary switching from pulse dialling to DTMF dialling

In case that your telephone is set to DTMF dialling, this section is of no significance for you.

If your telephone works on pulse dialling, you can nevertheless transmit data or use other services (paging systems and control your answering machine remotely) by switching temporarily to DTMF dialling.

Temporary switching of the dialling mode:
during a call or after lifting the handset

1. Press the programming key .
2. Press the special key asterisk .
3. Press the programming key .

Your telephone is switched to DTMF dialling now. You can insert the relevant numbers or follow the instructions for the features you require. If you want to switch back to pulse dialling, e.g. for further inquiries, press the recall key . Press the recall key again to return to DTMF dialling. The telephone automatically switches back to pulse dialling when you replace the handset or repeat steps 1 to 3 mentioned above.

The PIN and it's purpose / Ringer

The PIN and it's purpose

PIN = Personal Identification Number

Unauthorised tampering with the telephone settings can be prevented by entering a PIN that is known only to authorised persons.

The PIN is a number with three digits using the digits 0 to 9. As delivered ex works, the telephone has the PIN "0 0 0".

Programming the PIN

In order to program the PIN, follow the steps below:

1. Lift the handset and await the dial tone.
2. Press the programming key .
3. Press the digit keys 8 and 9.
4. Enter the old PIN.
5. Enter the new PIN.
6. Verify the new PIN.
7. Press the programming key .
8. Replace the handset.

The PIN can be cleared by entering the PIN "0 0 0". PINs that are unknown or have been forgotten can only be cleared by the manufacturer for an appropriate charge.

Ringer

Ringer volume

The ringer volume can be adjusted in two ways:

First method:

1. Lift the handset and await the dial tone.
2. Press the programming key .
3. Press the digit key 5.
4. Choose the desired ringer volume by pressing one of the digits from 1 (soft) to 4 (loud).
5. Press the programming key  and the ringer volume is stored.
6. Replace the handset.

Second method:

Do not lift the handset when the telephone is ringing. Press one of the digit keys 1 to 4 for the desired ringer volume which is automatically stored while the telephone is ringing.

Ringer repetition frequency

1. Lift the handset and await the dial tone.
2. Press the programming key .
3. Press the digit key 6.
4. Choose the desired repetition frequency by pressing one of the digit keys from 1 (slow) to 4 (fast).
5. Press the programming key  and the desired ringer repetition frequency is stored.
6. Replace the handset.

Locking the telephone / Changing the dialling method

Locking the telephone (except during ABCD mode)

Locking the keypad (except fast and shortcode dialling keys)

For locking the keypad, follow the instructions below:

1. Lift the handset and await the dial tone.
2. Press the programming key .
3. Press the digit keys 8 and 11.
4. Enter the PIN.
5. Press the programming key .
6. Replace the handset.

After locking the keypad, fast and shortcode dialling memories can be operated only.

Unlocking the keypad

For unlocking the keypad, follow the instructions below:

1. Lift the handset and await the dial tone.
2. Press the programming key .
3. Press the digit keys 8 and 0.
4. Enter the PIN.
5. Press the programming key .
6. Replace the handset.

Changing the dialling method (PD / DTMF) and the basic settings

If the telephone system, where your telephone is to be connected to, needs other basic settings than those provided in chapter 2 (default settings), you have to set the parameters described below:

1. Lift the handset and await the dial tone.
2. Press the programming key .
3. Press the digit key 1.
4. Enter the PIN.
5. Press the redial key .
6. Enter the relevant code (see annex).
7. Press the programming key .
8. Replace the handset.

Annex:

The codes have the following meaning:

Code 033 = PD, recall key set to "earth"

Code 034 = PD, recall key set to "flash"

Code 036= DTMF, recall key set to "earth"

Code 037= DTMF, recall key set to "flash"

Code 038= DTMF with ABCD, recall key set to "earth" (All memories are deleted!)

Code 039= DTMF with ABCD, recall key set to "flash" (All memories are deleted!)

Code 041= flash time: 90 ms

Code 046= flash time: 360 ms

Code 042= flash time: 120 ms

Code 047= flash time: 480 ms

Code 043= flash time: 180 ms

Code 048= flash time: 600 ms

Code 044= flash time: 240 ms

Code 049= flash time: 800 ms

Code 045= flash time: 300 ms

Code 050= flash time: 1000 ms

Operation in a telephone system (PBX)

Trunk codes

The FMN B122plus offers the possibility to program 2 trunk codes, each with up to two digits. After dialling these codes, a pause of approx. 3 seconds is automatically produced.

Programming a trunk codes

1. Lift the handset and await the dial tone.
2. Press the programming key .
3. Press the digit key 0.
4. Press the redial key .
5. Enter the trunk code.
- 6.1. If you want to program another trunk code:
 - Press the redial key .
 - Enter the trunk code.
 - Press the programming key  and the trunk code is stored.
- 6.2. If you do not want to program another trunk code:
 - Press the programming key  and the trunk code is stored.
7. Replace the handset.

Note:

Each time you change the trunk code, you have to delete all previously stored trunk codes according to chapter "Deleting trunk codes".

Deleting trunk codes

1. Lift the handset and await the dial tone.
2. Press the programming key .
3. Press the digit key 0.
4. Press the redial key .
5. Press the mute key .
6. Press the programming key  and the trunk code is deleted.
7. Replace the handset.

Operating the ABCD keys

General introduction

During ABCD operation, neither fast dialling keys nor shortcode memories are available. The keypad lock can also not be activated.

Programming an automatic flash on the ABCD keys (only possible in DTMF dialling method with ABCD and flash function)

The FMN B122plus offers the possibility (only possible when the code 039 = DTMF with ABCD, recall key set to flash, has been set) to program an automatic flash which is sent to the telephone system before the ABCD function when one of the ABCD keys is pressed.

Programming an automatic flash

1. Lift the handset and await the dial tone.
2. Press the programming key .
3. Press the digit key 4.
4. Press the redial key .

Malfunction / Connection permit / Technical data

5. Press one of the ABCD keys.
6. Press the programming key  and the selected keys are programmed with an automatic flash.
7. Replace the handset.

Note:

In case of programming a new automatic flash, all previously programmed automatic flashes are deleted.

Deleting the automatic flash

1. Lift the handset and await the dial tone.
2. Press the programming key .
3. Press the digit key 4.
4. Press the redial key .
5. Press the programming key  and all automatic flashes are deleted.
6. Replace the handset.

Handset standby position

You can put the handset in a standby position during a call by placing it into the middle hollow of the case without interrupting the connection.

Malfunctions

In case of any occurring malfunctions, please contact your specialist dealer / supplier.

Connection permit

This telephone is designed for connection to an access for analogue switched connections of the public telecommunications network (analogue access with standard requirements). It may be connected and operated by any person.

The telephone is compliant with the harmonized standards for connection to public telecommunications networks.

This is no guarantee, however, for successful operation of the telephone unit on each network termination point due to the differences in the public telecommunications network in the different countries.

If you encounter problems when operating the telephone, please contact your specialist dealer.

The FMN communications GmbH declares that **FMN B122plus** complies with the basic requirements and the other relevant provisions of the directive 1999/5/EC (R&TTE directive).


The complete declaration of conformity can be found and downloaded on our website <http://www.fmncom.com>.

The unit may be operated in the European Union (EU). If operated out of the EU, the national regulation of the relevant country is binding.

Technical data

Enclosure:	IP 20
Dimensions:	W / H / D: 225 / 170 / 85 mm
Weight:	0.7 kg
Operating temperature range:	-5 °C to +45 °C
Humidity:	max. 95 %













Drilling template

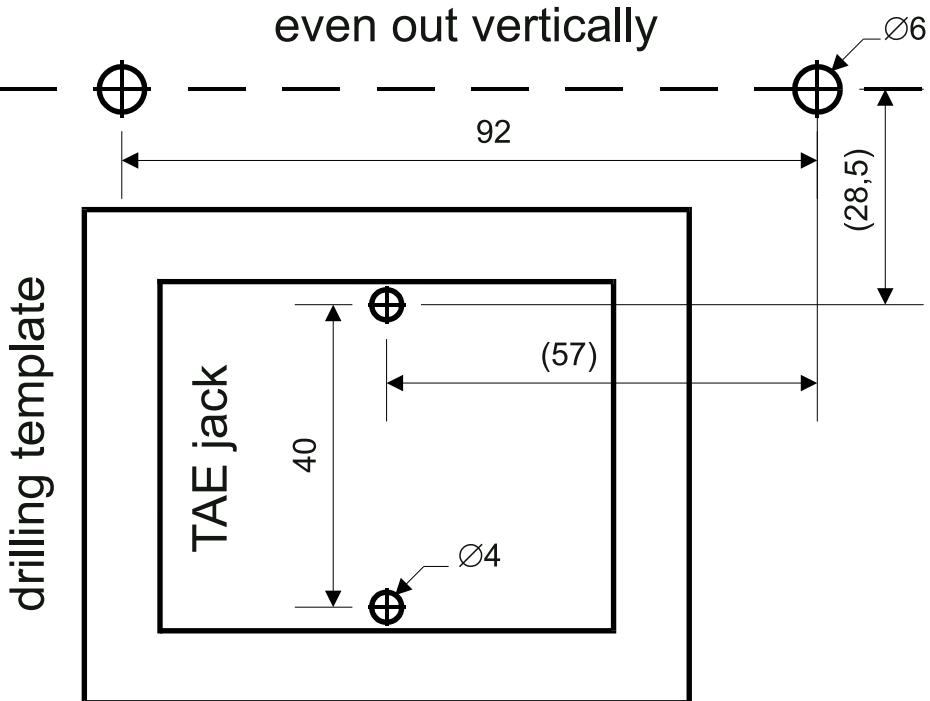

Labelling card

Use for clipping or copying

            - Clip and label labelling card
- Lift the plastic cover with a screwdriver or something similar, take the protection foil off the cover at both sides
- Insert labelling card, insert plastic cover



Notes

For protection of the environment!
Printed on paper bleached without chlorine, with a maximal waste paper content of 50 %.

FMN communications GmbH

Grimmelallee 4	99734 Nordhausen
P.O. box 10 04 65	99724 Nordhausen
Phone	+49 (36 31) 56-50 00
Fax	+49 (36 31) 56-32 24
Email	info@fmn.de
Internet	www.fmncom.com

HOTLINE

+49 (36 31) 56-34 16

We are at your disposal to answer your questions.

Subject to change.

FMN B122plus: 1103.3.0500.01

Edition: 05/04 (1111-4858)